

CME Booster

Safety instructions and other important information



GRUNDFOS X

English (GB) Safety instructions

Original safety instructions

CONTENTS

	Page
1. Symbols used in this document	2
2. System sizing	2
3. Mechanical installation	2
4. Electrical connection	3
4.1 Protection against electric shock - indirect contact	3
4.1.1 Additional protection	3
4.1.2 Motor protection	3
4.1.3 Protection against mains voltage transients	3
5. Startup	3
6. Control panel	3
6.1 Setpoint setting	4
6.2 Start/stop of pump	4
6.3 Resetting of fault indications	4
7. Operating conditions	5
7.1 Ambient temperature	5
7.1.1 Ambient temperature during storage and transportation	5
7.1.2 Ambient temperature during operation	5
7.2 Installation altitude	5
8. Working on the product	5
8.1 Megging	5
9. Technical data	5
9.1 Supply voltage	5
9.2 Overload protection	5
9.3 Maximum total head	5
10. Fault finding	6
11. Further product information	7
12. Disposal	7

Warning

Prior to installation, read this document and the quick guide. Installation and operation must comply with local regulations and accepted codes of good practice.

Warning

The use of this product requires experience with and knowledge of the product.

Persons with reduced physical, sensory or mental capabilities must not use this product, unless they are under supervision or have been instructed in the use of the product by a person responsible for their safety.

Children must not use or play with this product.

1. Symbols used in this document



Warning

If these safety instructions are not observed, it may result in personal injury.



Warning

If these instructions are not observed, it may lead to electric shock with consequent risk of serious personal injury or death.



Warning

The surface of the product may be so hot that it may cause burns or personal injury.



If these safety instructions are not observed, it may result in malfunction or damage to the equipment.



Notes or instructions that make the job easier and ensure safe operation.

2. System sizing



Warning

The system in which the CME Booster is incorporated must be designed for the maximum pump pressure.



The default setting will cause the pump not to stop until it reaches its maximum pressure.

3. Mechanical installation



Warning

Before starting work on the product, switch off the power supply. Make sure that the power supply cannot be accidentally switched on.



4. Electrical connection

Carry out the electrical connection according to local regulations.

Check that the supply voltage and frequency correspond to the values stated on the nameplate.

Warning

Before making connections in the terminal box or breaker cabinet, make sure that the power supply has been switched off for at least 5 minutes. Make sure that the power supply cannot be accidentally switched on.

The product must be connected to an external all-pole mains switch according to local regulations.



The product must be earthed and protected against indirect contact in accordance with local regulations.

We recommend to fit the permanent installation with an earth leakage circuit breaker (ELCB) with a tripping current < 30 mA.

If the power supply cable is damaged, it must be replaced by the manufacturer, the manufacturer's service partner or a similarly qualified person.

4.1 Protection against electric shock - indirect contact

4.1.1 Additional protection

If the pump is connected to an electric installation where an earth leakage circuit breaker (ELCB) is used as additional protection, the circuit breaker must be marked with the following symbols:



This circuit breaker is type B.

The total leakage current of all the electrical equipment in the installation must be taken into account.

During start and at asymmetrical supply systems, the leakage current can be higher than normal and may cause the ELCB to trip.

4.1.2 Motor protection

The pump requires no external motor protection. The motor incorporates thermal protection against slow overloading and blocking, TP 211 according to IEC 34-11).

4.1.3 Protection against mains voltage transients

The pump is protected against voltage transients by built-in varistors between the phases and between phases and earth.

5. Startup

Caution

Do not start the pump until it has been filled with liquid.

6. Control panel



Warning

If the control panel is cracked or perforated, replace it immediately. Contact the nearest Grundfos sales company.



Warning

The product may be so hot that only the buttons should be touched to avoid burns.

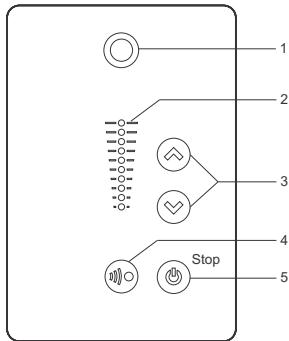


Fig. 1 Standard control panel

Pos.	Symbol	Description
1		Grundfos Eye Shows the operating status of the pump. See section 11. <i>Further product information</i> .
2	-	Light fields for indication of setpoint.
3		Changes the setpoint.
4		Enables IR communication with the Grundfos GO Remote and other products of the same type.*
5		Makes the pump ready for operation/starts and stops the pump. Start: If the button is pressed when the pump is stopped, the pump will only start if no other functions with higher priority have been enabled. See section 11. <i>Further product information</i> . Stop: If the button is pressed when the pump is running, the pump will always be stopped. When the pump is stopped via this button, the "Stop" text next to the button will illuminate.

* CME Boosters cannot communicate via radio.

6.1 Setpoint setting

Caution The setpoint must not be set higher than the pressure which the pump can deliver.

Set the desired setpoint of the pump by pressing or .

The light fields on the control panel will indicate the setpoint set.

H_{\max} : maximum head (see pump nameplate).

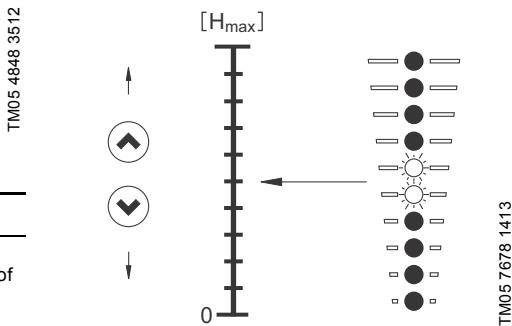


Fig. 2

6.2 Start/stop of pump

Start the pump by pressing or by continuously pressing until the desired setpoint is indicated.

Stop the pump by pressing . When the pump is stopped, the "Stop" text next to the button will illuminate. The pump can also be stopped by continuously pressing until none of the light fields are on.

If the pump has been stopped by pressing , it can only be given free to operation by pressing again.

If the pump has been stopped by pressing , it can only be restarted by pressing .

6.3 Resetting of fault indications

A fault indication can be reset in one of the following ways:

- Briefly press or on the pump. This will not change the setting of the pump. A fault indication cannot be reset by pressing or if the buttons have been locked.
- Switch off the power supply until the indicator lights are off.
- With the Grundfos GO Remote.

7. Operating conditions

7.1 Ambient temperature

7.1.1 Ambient temperature during storage and transportation

-30 - 60 °C.

7.1.2 Ambient temperature during operation

-20 - 50 °C.

The motor can operate with the rated power output (P2) at 50 °C, but continuous operation at higher temperatures will reduce the expected product life. If the motor is to operate at ambient temperatures between 50 and 60 °C, an oversized motor must be selected. Contact Grundfos for further information.

7.2 Installation altitude

Caution The motor must not be installed more than 2000 metres above sea level.

Installation altitude is the height above sea level of the installation site.

- Motors installed up to 1000 metres above sea level can be loaded 100 %.
- Motors installed more than 1000 metres above sea level must not be fully loaded due to the low density and consequent low cooling effect of the air. See fig. 3.

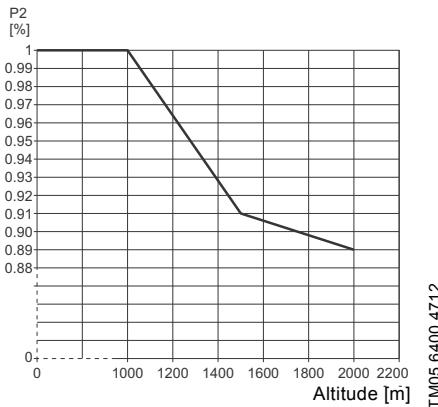


Fig. 3 Derating of motor output (P2) in relation to altitude above sea level

8. Working on the product

Warning

Before fitting add-on modules, making connections in the terminal box or breaker cabinet or starting fault finding, make sure that the power supply has been switched off for at least 5 minutes. Make sure that the power supply cannot be accidentally switched on.

8.1 Megging

Megging of an installation incorporating

Caution MGE motors is not allowed, as the built-in electronics may be damaged.

9. Technical data

9.1 Supply voltage

1 x 220-240 V - 10 %/+ 10 %, 50/60 Hz - 2 %/+ 2 %, PE.

9.2 Overload protection

The overload protection of the E-motor has the same characteristic as an ordinary motor protective circuit breaker. As an example, the E-motor can stand an overload of 110 % of rated current for 1 minute.

9.3 Maximum total head

Pump type	Maximum head [m]
CMBE 1-44	44
CMBE 1-75	75
CMBE 1-99	99
CMBE 3-30	30
CMBE 3-62	62
CMBE 3-93	93
CMBE 5-31	31
CMBE 5-62	62
CMBE 10-27	27
CMBE 10-54	54

10. Fault finding

Warning

 Before starting work on the product, switch off the power supply. Make sure that the power supply cannot be accidentally switched on.

Fault	Grundfos Eye	Cause	Remedy
1. Pump does not run.	No lights on.	a) Power supply failure. b) Fuses blown.	Switch on power supply. Check cables and cable connections for defects and loose connections. Check cables and cable connections for defects, and replace the fuses.
	Alarm. Motor stopped. Two opposite red indicator lights flashing simultaneously.	c) Sensor is defective.	Replace sensor.
2. Pump performance is unstable.	No lights on.	a) Pump inlet pressure too low. b) Suction pipe is partly blocked by impurities. c) Leakage in suction pipe. d) Air in suction pipe or pump.	Check the inlet conditions of the pump. Remove and clean suction pipe. Remove and repair suction pipe. Vent suction pipe or pump. Check the inlet conditions of the pump.
3. Pump has tried to restart five times and is now stopped.	Alarm. Motor stopped. Two opposite red indicator lights flashing simultaneously.	a) Pump inlet pressure too low. b) Suction pipe is partly blocked by impurities. c) The foot or non-return valve is blocked in closed position. d) Leakage in suction pipe. e) Air in suction pipe or pump.	Check the inlet conditions of the pump. Remove and clean suction pipe. Remove and clean, repair or replace valve. Remove and repair the suction pipe. Vent suction pipe or pump. Check the inlet conditions of the pump.
4. Pump runs backwards when switched off.	No lights on.	a) Leakage in suction pipe. b) Foot or non-return valve defective. c) Foot valve is blocked in completely or partly open position.	Remove and repair suction pipe. Remove and clean, repair or replace valve. Remove and clean, repair or replace valve.

11. Further product information

Use either the QR code or the web address below to access the complete installation and operating instructions for the relevant product.

CRE, CRIE, CRNE, SPKE, MTRE and CME pumps



TM05 6174 4612

grundfos.com/E-pump1-manual

12. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

Subject to alterations.

Declaration of conformity

GB: EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the product CME Booster, to which the declaration below relates, is in conformity with the Council Directives listed below on the approximation of the laws of the EU member states.

CZ: Prohlášení o shodě EU

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobek CME Booster, na který se toto prohlášení vzťahuje, je v souladu s níže uvedenými ustanoveními směrnice Rady pro sbližení právních předpisů členských států Evropského společenství.

DK: EU-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produktet CME Booster som erklæringen nedenfor omhandler, er i overensstemmelse med Rådets direktiver der er nævnt nedenfor, om indbyrdes tilnærrelse til EU-medlemsstaternes lovgivning.

ES: Declaración de conformidad de la UE

Grundfos declara, bajo su exclusiva responsabilidad, que el producto CME Booster al que hace referencia la siguiente declaración cumple lo establecido por las siguientes Directivas del Consejo sobre la aproximación de las legislaciones de los Estados miembros de la UE.

FR: Déclaration de conformité UE

Nous, Grundfos, déclarons sous notre seule responsabilité, que le produit CME Booster, auquel se réfère cette déclaration, est conforme aux Directives du Conseil concernant le rapprochement des législations des États membres UE relatives aux normes énoncées ci-dessous.

HR: EU deklaracija sukladnosti

Mi, Grundfos, izjavljujemo s punom odgovornošću da je proizvod CME Booster, na koja se izjava odnosi u nastavku, u skladu s direktivama Vijeća dolje navedenih o uskladištanju zakona država članica EU-a.

IT: Dichiaraione di conformità UE

Grundfos dichiara sotto la sua esclusiva responsabilità che il prodotto CME Booster, al quale si riferisce questa dichiarazione, è conforme alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri UE.

LV: ES atbilstības deklarācija

Sabiedrība Grundfos ar pilnu atbildību paziņo, ka produkts CME Booster, uz kuru attiecas tālāk redzamā deklarācija, atbilst tālāk norādītajām Padomes direktīvām par ES daļbilstu normatīvo aktu tuvināšanu.

PL: Deklaracja zgodności UE

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasz produkt CME Booster, którego deklaracja niniejsza dotyczy, jest zgodny z następującymi dyrektywami Rady w sprawie zblżenia przepisów prawnych państw członkowskich.

RO: Declarația de conformitate UE

Noi Grundfos declarăm pe propria răspundere că produsul CME Booster, la care se referă această declaratie, este în conformitate cu Directivele de Consiliu specificate mai jos privind armonizarea legilor statelor membre UE.

RU: Декларация о соответствии нормам ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделие CME Booster, к которому относится нижеприведённая декларация, соответствует нижеприведённым директивам Совета Европейского союза о тождественности законов стран-членов ЕС.

SI: Izjava o skladnosti EU

V Grundfosu s polno odgovornostjo izjavljamo, da je izdelek CME Booster, na katerega se spodnja izjava nanaša, v skladu s spodnjimi direktivami Svetova o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic EU.

BG: Декларация за съответствие на ЕО

Ние, фирма Grundfos, заявяваме с пълна отговорност, че продуктът CME Booster, за който се отнася настоящата декларация, отговаря на следните директиви на Съвета за уеднаквяване на правните разпоредби на държавите-членки на ЕО.

DE: EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass das Produkt CME Booster, auf das sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmt.

EE: EÜvastavusdeklaratsioon

Meie, Grundfos, kinnitame ja kanname ainuisikulist vastutust selle eest, et toode CME Booster, mille kohta all olev deklaratsioon käib, on kooskõlas Nõukogu Direktiividega, mis on nimetatud all pool vastavat vastuvõetud õigusaktide ühtlustamise kohta EÜ liikmesriikides.

FI: EU-vaatimustenmukaisuusvakuutus

Grundfos vakuuttaa omalla vastuullaan, että tuote CME Booster, jota tämä vakuutus koskee, on EU:n jäsenvaltioiden lainsäädännön lähestymiseen tähtäävien Euroopan neuvoston direktiivien vaatimusten mukainen seuraavasti.

GR: Δήλωση συμμόρφωσης ΕΕ

Εμείς, η Grundfos, δηλώνουμε με αποκλειτικά δική μας ευθύνη ότι το προϊόν CME Booster, στο οποίο αναφέρεται η παρακάτω δήλωση, συμμορφώνεται με τις παρακάτω Οδηγίες του Συμβουλίου περί προσέγγισης των νομοθεσιών των κρατών μελών της ΕΕ.

HU: EU megfelelőségi nyilatkozat

Mi, a Grundfos vállalat, teljes felelősséggel kijelentjük, hogy a(z) CME Booster termék, amelyre az alábbi nyilatkozat vonatkozik, megfelel az Európai Unió tagállamainak jogi irányelveit összehangoló tanács az alábbi előírásainak.

LT: ES atitikties deklaracija

Mes, Grundfos, su visa atskakomybe pareiškiame, kad produktas CME Booster, kuriam skirta ši deklaracija, atitinka žemiau nurodytas Tarybos Direktyvas dėl ES šalių narių įstatymų suderinimo.

NL: EU-conformiteitsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat product CME Booster, waarop de onderstaande verklaring betrekking heeft, in overeenstemming is met de onderstaande Richtlijnen van de Raad inzake de onderlinge aanpassing van de wetgeving van de EU-lidstaten.

PT: Declaração de conformidade UE

A Grundfos declara sob sua única responsabilidade que o produto CME Booster, ao qual diz respeito a declaração abaixo, está em conformidade com as Directivas do Conselho sobre a aproximação das legislações dos Estados Membros da UE.

RS: Deklaracija o uskladjenosti EU

Mi, kompanija Grundfos, izjavljujemo pod punom vlastitom odgovornošću da je proizvod CME Booster, na koji se odnosi deklaracija ispod, u skladu sa dole prikazanim direktivama Saveta za uskladištanju zakona država članica EU.

SE: EU-försäkran om överensstämelse

Vi, Grundfos, försäkrar under ansvar att produkten CME Booster, som omfattas av nedanstående försäkran, är i överensstämme med de rådsdirektiv om inbördes närmande till EU-medlemsstaternas lagstiftning som listas nedan.

SK: ES vyhlásenie o zhode

My, spoločnosť Grundfos, vyhľadujeme na svoju plnú zodpovednosť, že produkt CME Booster, na ktorý sa vyhlásenie uvedené nižšie vzťahuje, je v súlade s ustanoveniami nižšie uvedených smerníc Rady pre zblženie právnych predpisov členských štátov EU.

TR: AB uygunluk bildirgesi

Grundfos olarak, aşağıdaki bildirim konusu olan CME Booster ürünlerinin, AB üye ülkelerinin direktiflerinin yakınlaştırılması ilgili durumun aşağıdaki Konsey Direktifleriyle uyumlu olduğunu ve bununla ilgili olarak tüm sorumluluğun bize ait olduğunu beyan ederiz.

UA: Декларація відповідності директивам EU

Ми, компанія Grundfos, під нашу одноосібну відповідальність заявляємо, що виріб CME Booster, до якого відноситься нижче наведена декларація, відповідає директивам EU, переліченим нижче, щодо поточності законів країн-членів ЄС.

- Machinery Directive (2006/42/EC).
Standard used: EN 809:1998, A1:2009.
- Low Voltage Directive (2014/35/EU).
Standard used: EN 61800-5-1:2007.
- EMC Directive (2014/30/EU).
Standard used: EN61800-3:2004 + A1:2012.

This EU declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions (publication number 98456935 0616).

Bjerringbro, 18 May 2016



Svend Aage Kaae
Director
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile technical file and
empowered to sign the EU declaration of conformity.

RUS

CMVE**Руководство по эксплуатации****EAC**

Руководство по эксплуатации на данное изделие является составным и включает в себя несколько частей:

Часть 1: настоящее «Руководство по эксплуатации».

Часть 2: электронная часть «Паспорт. Руководство по монтажу и эксплуатации» размещенная на сайте компании Грундфос. Перейдите по ссылке, указанной в конце документа.

Часть 3: информация о сроке изготовления, размещенная на фирменной табличке изделия.

Сведения о сертификации:

Насосы типа CMVE сертифицированы на соответствие требованиям Технических регламентов Таможенного союза: ТР ТС 004/2011 «О безопасности низковольтного оборудования»; ТР ТС 010/2011 «О безопасности машин и оборудования»; ТР ТС 020/2011 «Электромагнитная совместимость технических средств».

Сертификат соответствия:

№ ТС RU C-DK.AИ30.B.01127, срок действия до 24.11.2019 г.

Выдан:

Органом по сертификации продукции «ИВАНОВО-СЕРТИФИКАТ» ООО «Ивановский Фонд Сертификации».

Адрес: 153032, Российская Федерация, г. Иваново, ул. Станкостроителей, д.1.

KAZ

CMVE**Пайдалану бойынша нұсқаулық**

Атаулы өнімге арналған пайдалану бойынша нұсқаулық құрамалы болып келеді және келесі бөлімдерден тұрады:

1 бөлім: атаулы «Пайдалану бойынша нұсқаулық»

2 бөлім: Грундфос компаниясының сайтында орналасқан электронды бөлім «Төлқүжат, Құрастыру және пайдалану бойынша нұсқаулық». Құжат соңында көрсетілген сілтеме арқылы етінгіз.

3 бөлім: енімнің фирмалық тақташасында орналасқан шығарылған үақыты жөніндегі мәлімет

Сертификаттау туралы ақпарат:

CMVE типті сорғылары «Төмен волтты жабдықтардың қауіпсіздігі туралы» (ТР ТС 004/2011), «Машиналар және жабдықтар қауіпсіздігі туралы» (ТР ТС 010/2011) «Техникалық заттардың электрлі магниттік сәйкестілігі» (ТР ТС 020/2011) Кеден Одағының техникалық регламенттерінің талаптарына сәйкес сертификатталды.

Сәйкестік сертификат:

№ ТС RU C-DK.AИ30.B.01127, жарамдылық мерзімі 24.11.2019 жылға дейін

«Иваново Сертификаттау Қоры» ЖШҚ «ИВАНОВО-СЕРТИФИКАТ» өнімді сертификациялау бойынша органымен берілген.

Мекен-жайы: 153032, Ресей Федерациясы, Иванов облысы, Иваново қ., Станкостроителей көш., 1 үй.

KG

СМВЕ

Пайдалануу боюнча колдонмо

Аталган жабдууну пайдалануу боюнча колдонмо курамдык жана өзүнө бир нече бөлүкчөнү камтыйт:

1-Бөлүк: «Пайдалануу боюнча колдонмо»

2-Бөлүк: «Паспорт. Пайдалануу жана монтаж боюнча колдонмо» электрондук бөлүгү Грундфос компаниянын сайтында жайгашкан. Документтин аягында көрсөтүлгөн шилтемеге кайрылыныз.

3-Бөлүк: жабдуунун фирмалык тектасында жайгашкан даирдо мөөнөтү туралуу маалымат.

Шайкештик жөнүндө декларация

СМВЕ түрүндөгү согүчтөр Бажы Биримдиктин Техникалык регламенттин талаптарына ылайыктуу тастыкталган: ТР ТБ 004/2011 «Төмөн вольттук жабдуунун коопсуздугү жөнүндө»; ТР ТБ 010/2011 «Жабдуу жана машиналардын коопсуздугү жөнүндө»; ТР ТБ 020/2011 «Техникалык караажаттардын электромагниттик шайкештиги».

Шайкештик сертификаты:

№ TC RU C-DK.AИ30.B.01127, 24.11.2019 ж. чейин жарамдуу.

Берилген:

«ИВАНОВО-СЕРТИФИКАТ» өндүрүмдү тастыктаган ЖЧК «Ивановский Фонд Сертификации» органы менен.

Дареги: 153032, Орусия Федерациясы, Иваново ш., Станкостроители көч., г.1.

ARM

СМВЕ

҇аһағордбыман әңөнәрلى

Сүйүп ашаррағпірмашын җашағордбыман әңөнәрлөр բаянлашад կ үйрэх үшіндең үшіндең

Шаша 1. үшін «҇аһағордбыман әңөнәрлөр»:

Шаша 2. ҇еңбірнан ажынан үшін. ажын է «Үзіләнәрлөр: Упнанашаман և

жашағордбыман әңөнәрлөр» төңәрәрлөр «Фирмалылыш». Ұншектең үшіншіндең үшіншіндең үшіншіндең

Шаша 3. үшін «҇еңбірнан ажынан үшін. ажын է «Үзіләнәрлөр: Упнанашаман әңөнәрлөр»:

Шеңбірнан ажынан үшін. ажын է «Үзіләнәрлөр: Упнанашаман әңөнәрлөр»:

СМВЕ түрүндөгү ашаррағпірмашын үшін. ажын է «Үзіләнәрлөр: Упнанашаман әңөнәрлөр»:

Шеңбірнан ажынан үшін. ажын է «Үзіләнәрлөр: Упнанашаман әңөнәрлөр»:

Шеңбірнан ажынан үшін. ажын է «Үзіләнәрлөр: Упнанашаман әңөнәрлөр»:

Шеңбірнан ажынан үшін. ажын է «Үзіләнәрлөр: Упнанашаман әңөнәрлөр»:

№ TC RU C-DK.AИ30.B.01127, 24.11.2019 ж. чейин жарамдуу.

Сришад է:

«Гранит-УЕГСЕФБНЧУС» ашаррағпірмашын үшін. ажын է «Үзіләнәрлөр: Упнанашаман әңөнәрлөр»:

«Үзіләнәрлөр: Упнанашаман әңөнәрлөр»:

Шаша 153032, Орусия Федерациясы, Иваново ш., Станкостроители, 1.



<http://net.grundfos.com/qr/i/98768075>

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garín
1619 Garín Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шаффарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 8C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburri tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumpum AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbalint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraipakkam
Chennai 0096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Ciliilitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava iela 60, LV-1035, Riga,
Tāl. + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguan U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de C.V.
 Boulevard TLC No. 15
 Parque Industrial Stiva Aeropuerto
 Apodaca, N.L. 66600
 Phone: +52-81-8144 4000
 Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
 Veluwezoom 35
 1326 AE Almere
 Postbus 22015
 1302 CA ALMERE
 Tel.: +31-88-478 6336
 Telefax: +31-88-478 6332
 E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
 17 Beatrice Tinsley Crescent
 North Harbour Industrial Estate
 Albany, Auckland
 Phone: +64-9-415 3240
 Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
 Strømsveien 344
 Postboks 235, Leirdal
 N-1011 Oslo
 Tf.: +47-22 90 47 00
 Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
 ul. Klonowa 23
 Baranowo k. Poznania
 PL-62-081 Przeźmierowo
 Tel: (+48-61) 650 13 00
 Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
 Rua Calvet de Magalhães, 241
 Apartado 1079
 P-2770-153 Paço de Arcos
 Tel.: +351-21-440 76 00
 Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
 Bd. Biruintei, nr 103
 Pantelimon county Ilfov
 Phone: +40 21 200 4100
 Telefax: +40 21 200 4101
 E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
 109544, г. Москва, ул. Школьная,
 39-41, стр. 1
 Тел. (+7) 495 564-88-00 (495)
 737-30-00
 Факс (+7) 495 564 88 11
 E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
 Omladinskih brigada 90b
 11070 Novi Beograd
 Phone: +381 11 2258 740
 Telefax: +381 11 2281 769
 www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
 25 Tai Kang
 Singapore 619264
 Phone: +65-6681 9688
 Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
 Prievozská 4D
 821 09 BRATISLAVA
 Phona: +421 2 5020 1426
 sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
 Leskoškova 9e, 1122 Ljubljana
 Phone: +386 (0) 1 568 06 10
 Telefax: +386 (0) 1 568 06 19
 E-mail: tehnika-si@grundfos.com

South Africa

GRUNDFOS (PTY) LTD
 Corner Mountjoy and George Allen
 Roads
 Wilbart Ext. 2
 Bedfordview 2008
 Phone: (+27) 11 579 4800
 Fax: (+27) 11 455 6066
 E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
 Camino de la Fuentecilla, s/n
 E-28110 Algete (Madrid)
 Tel.: +34-91-848 8800
 Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
 Box 333 (Lunnagårdsgatan 6)
 431 24 Mölndal
 Tel.: +46 31 332 23 000
 Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
 Bruggacherstrasse 10
 CH-8117 Fällanden/ZH
 Tel.: +41-44-806 8111
 Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
 7 Floor, 219 Min-Chuan Road
 Taichung, Taiwan, R.O.C.
 Phone: +886-4-2305 0868
 Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
 92 Chaloem Phrakiat Rama 9 Road,
 Dokmai, Pravej, Bangkok 10250
 Phone: +66-2-725 8999
 Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd.
 Sti.
 Gebze Organize Sanayi Bölgesi,
 İhsan dede Caddesi,
 2. yol 200. Sokak No. 204
 41490 Gebze/ Kocaeli
 Phone: +90 - 262-679 7979
 Telefax: +90 - 262-679 7905
 E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
 Столичне шосе, 103
 м. Київ, 03131, Україна
 Телефон: +(38 044) 237 04 00
 Факс: +(38 044) 237 04 01
 E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
 P.O. Box 16768
 Jebel Ali Free Zone
 Dubai
 Phone: +971 4 8815 166
 Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
 Grovebury Road
 Leighton Buzzard/Beds. LU7 4TL
 Phone: +44-1525-850000
 Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
 17100 West 118th Terrace
 Olathe, Kansas 66061
 Phone: +1-913-227-3400
 Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Representative Office of Grundfos Kazakhstan in Uzbekistan
 38a, Oybek street, Tashkent
 Телефон: +(998) 71 150 3290 / 71 150 3291
 Факс: +(998) 71 150 3292

Addresses Revised 02.09.2016

be think innovate

98456935 0616

ECM: 1187560

www.grundfos.com

GRUNDFOS 

The name Grundfos, the Grundfos logo, and **be think innovate** are registered trademarks owned by Grundfos Holding A/S or Grundfos A/S, Denmark. All rights reserved worldwide.

© Copyright Grundfos Holding A/S