



Screen Washers


Removal, Cleaning and Installation



Tools needed: Large Pliers Flathead Screwdriver Cloth



1. Gently pull the wand out from the receptor as far as the hose will allow.

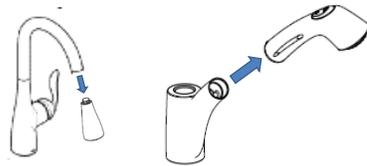

2. To prevent the hose from accidentally retracting back into the receptor, tie a cloth or large plastic bag around the hose. In addition, place a towel in the sink to cover the drain to prevent losing the washer down the drain.



3. With pliers hold the metal collar at the end of the hose, use your hand to unscrew the wand .




4. Look inside of the hose collar and the threaded end of the wand. Inside of one of these areas will be a screen washer (there are two types shown below). Remove the screen washer.



Type 1: In Spray Wand



Type 2: In Hose End

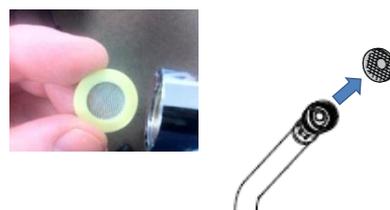

Two versions of this type are shown below



5. Hold the screen washer under the hose and turn the water on. This will allow you to rinse away any debris that might have built up on the screen.



Special Note

When running water through the hose without the screen washer in place, the flow of water should be fairly strong. If there is little or no water from the hose, then it is possible there is an obstruction further back in the system.



Good stream




Obstructed stream

6. Place the screen washer into the wand. If there was a separate O-ring, place this in on top of the washer.



7. Hand-tighten the hose to the wand. Then, using the pliers on the hose collar, turn 1/8 of a turn.

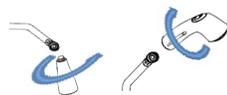

8. Turn the faucet on and inspect the connection for leaks. If there is a leak, tighten the connection another 1/8 of a turn.



9. Remove the towel or bag from the hose and set the wand into the receptor.

You are all done!