

Care and Maintenance of Your Whitehaus Collection® Product

Fireclay Sinks: Clean your Fireclay sink with mild soap and warm water or a gentle general purpose cleaner. Wipe the entire surface dry with a clean, soft cloth. Do not use abrasive cleaners, solvents, or metallic wire sponges. To avoid potential stains or damage to the finish avoid soaking dishes for abnormally long periods of time and refrain from leaving coffee grounds or tea bags in the sink. Whitehaus Collection® recommends the use of a protective grid in the bottom of the sink to avoid scuffing from heavy-duty cookware. If scuffing does occur, it can be easily buffed out with Gel Gloss, and a clean, soft, dry cloth.

All editorial content, graphics and other information provided in this publication are done as a public service to our devoted customers and consumers of our products. All names, designs, and model numbers of products are trademarks of Whitehaus Collection®. Although Whitehaus Collection® has attempted to provide accurate information, accuracy cannot be guaranteed. Whitehaus Collection® is not responsible for, nor does it have any liability for any mistake or typographical errors. All photos in this catalog are intended as a general description only. Pictures may not present an absolute likeness to actual product. All products should be inspected and measured promptly upon delivery and certainly before installation.

Whitehaus Collection® assumes no liability for the use of such information or for any damages incurred through its use or application.