


GRILL TIME

The Ultimate Portable Grill



Models: Tailgater GT
Tailgater GTX

COMPONENTS

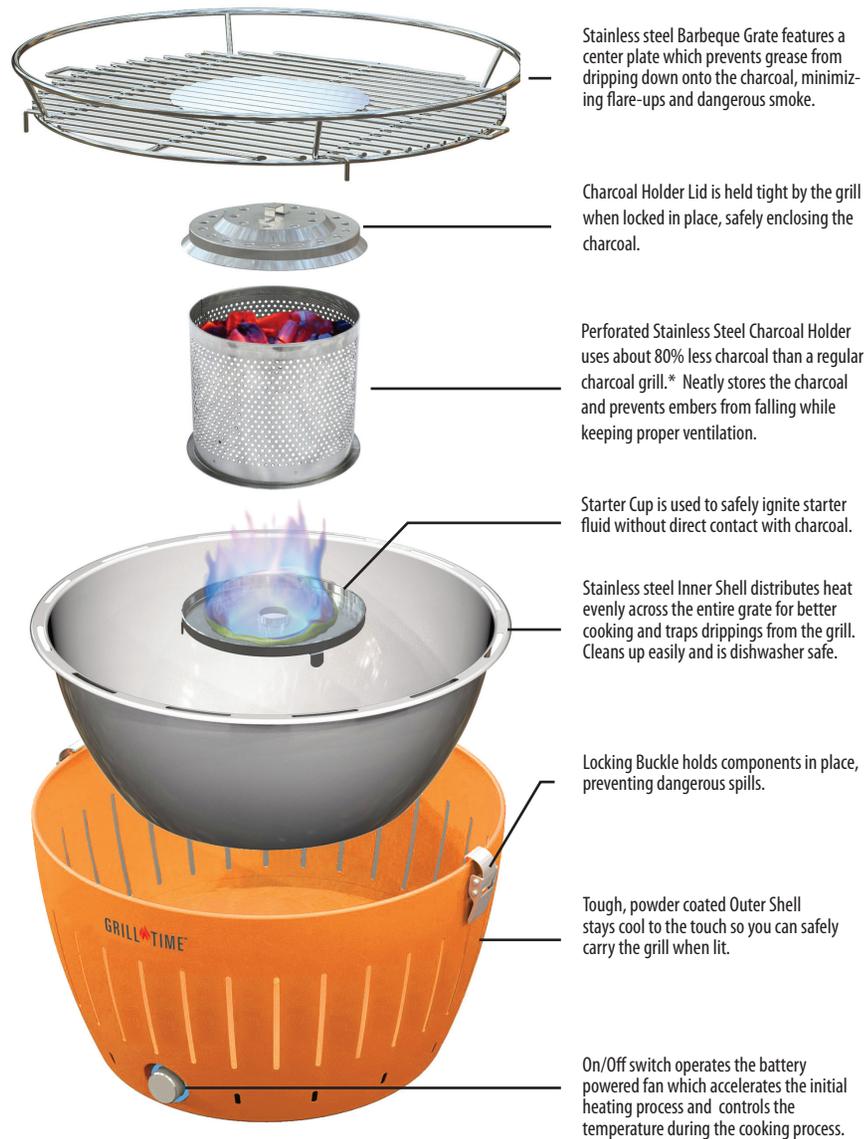

BEFORE YOU BEGIN

IMPORTANT!

1. Please read this instruction manual carefully and thoroughly before use, and save them in a convenient place for future reference.
2. Do not place the grill bottom in water or other liquid.
3. This grill is intended for private use only. It is not for commercial operation.
4. Make sure the grill control is in the OFF position when not in use and before cleaning.
5. Do not use any acidic solvents or flammable liquids to clean or operate this grill.
6. Remove batteries from the battery box when storing your grill for extended periods of non-use.

IMPORTANT SAFETY INFORMATION

WARNING!

The grill cooking surface becomes extremely hot while in operation. Use appropriate precautions while operating.

DANGER!

Failure to follow these important safety instructions may result in property damage, personal injury or loss of life.

WARNING!

FOR OUTDOOR USE ONLY! This grill may NOT be used for indoor cooking in a home, vehicle, tent or other enclosed area. Burning charcoal creates carbon monoxide, a tasteless odorless gas which can kill you. Use in well-ventilated, outdoor spaces only.

WARNING!

CARBON MONOXIDE HAZARD! This product may expose you to carbon monoxide which is known to the state of California to cause birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov.

WARNING!

This product can expose you to chemicals including soot which is known to the State of California to cause cancer, and carbon monoxide which is known to the state of California to cause birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov.

WARNING!

Keep children and pets away.

WARNING!

Keep Grill out of reach of children or persons not qualified to operate it.

DANGER!

Do not use mineral spirits, lighter fluid, gasoline or other flammable liquids or substances for lighting, or re-lighting this appliance. Use only Grill Time Lighting Gel or comparable lighting gel only.

DANGER!

Do not operate this grill indoors, or in any closed, unventilated space.

DANGER!

Do not use alcohol, gasoline, kerosene, or other non-approved combustible substance to ignite your grill. Use only Grill Time Starter Gel or other lighter gel approved by Grill Time.

WARNING!

Do not use water or other liquid to cool the grill. Allow it to cool naturally or by using the built in fan.

WARNING!

Never attempt to clean the grill while it is hot. Allow the grill to cool completely before cleaning.

WARNING!

Do not touch the grill grate or cooking surface while the grill is in use or still hot.

WARNING!

Never pour water or other liquid into the charcoal drum to extinguish charcoal. Allow the charcoal to cool naturally.

WARNING!

Never leave a hot grill unattended.

WARNING!

Keep the grill on a flat surface while in use.

ASSEMBLY AND OPERATING INSTRUCTIONS

IMPORTANT!

Read these assembly instructions completely and follow them closely before attempting to use your Grill Time grill.

Preparation.

1. Remove outer packaging.
2. Disassemble the grill and all components
3. Check the contents of your Grill Time grill carefully and make sure all items are included.

Operation

Note: When using your Grill Time grill for the first time, the charcoal drum may have a thin coating of oil on the surface as a result of the manufacturing process. This may cause the grill to smoke for the first few minutes as the grill becomes hot. Allow the grill a 3-5 minute "burn off" period to remove any oil from the drum.

1. Remove the battery box cover and install the 4 AA batteries (included) in the battery box.
2. Fill the charcoal drum with the desired amount of charcoal and install the cover.
3. Apply 2-3 oz. of lighter gel on the center of the ignition plate in circular shape.
4. Turn the fan control knob clockwise to its maximum "ON" position.
5. Light the starter gel with an appropriate long-stem trigger lighter.
6. Place the charcoal drum over the ignition plate.
7. Place the grate on top of the grill and lock into position using two the latches on the side of the outer grill shell.
8. Adjust the temperature up or down (after the initial 3 to 4 minute start up period) by turning the fan control knob clockwise (higher) or counter clockwise (lower).
9. Allow the charcoal to burn for at least 3 minutes before cooking.

MAINTENANCE AND STORAGE

Note:

When cleaning your grill, take special care to make sure the bottom of the grill, the battery box and fan assembly are not exposed to water or moisture of any kind.

Important:

Do not use any acidic solvents or any flammable liquids in the cleaning or operation of your Grill Time grill.

WARNING!

The grill must be completely cool before cleaning. Attempting to clean a hot grill may cause severe burns to the operator, and may damage the grill components which may not be covered by your warranty.

Note:

The grate and inner bowl are dishwasher safe and can also be washed by hand using regular dishwashing soap

Note:

Grill Time recommends you clean the grill grate, inner bowl, and any other dirty components after each use.

MODEL AVAILABILITY

TAILGATER GT			
Description	Model Number	UPC	Weight
<i>Red Tailgater GT</i>	UPG-R-13	680599113017	11.1 Lbs.
<i>Blue Tailgater GT</i>	UPG-B-13	680599113024	11.1 Lbs.
<i>Orange Tailgater GT</i>	UPG-O-13	680599113031	11.1 Lbs.
<i>Yellow Tailgater GT</i>	UPG-Y-13	680599113048	11.1 Lbs.
<i>Gray Tailgater GT</i>	UPG-G-13	680599113055	11.1 Lbs.
<i>Red Tailgater GTX</i>	UPG-R-18	680599113086	17.4 Lbs.
<i>Blue Tailgater GTX</i>	UPG-B-18	680599113093	17.4 Lbs.
<i>Orange Tailgater GTX</i>	UPG-O-18	680599113109	17.4 Lbs.
<i>Yellow Tailgater GTX</i>	UPG-Y-18	680599113116	17.4 Lbs.
<i>Gray Tailgater GTX</i>	UPG-G-18	680599113123	17.4 Lbs.

All Models Include Charcoal (2lb. bag), Starter Gel (6 oz bottle), Nylon Carry Case & 4 AA Batteries.

AVAILABLE REPLACEMENT PARTS

Description	Model No.
Charcoal Holder for Tailgater GT	UPG-CHC-GT
Charcoal Holder for Tailgater GTX	UPG-CHC-GTX
Cooking Grate for Tailgater GT	UPG-CG-GT
Cooking Grate for Tailgater GTX	UPG-CG-GTX

AVAILABLE ACCESSORIES

Description	Model No.	UPC
Grill Time Starter Gel	UPG-SG-16	680599113185
Grill Time Natural Wood Charcoal	UPG-CB-5	680599113208
Glass Cover for Tailgater GT	UPG-GCL-GT	680599113154
Glass Cover for Tailgater GTX	UPG-GCL-GTX	680599113161
Grill Time Grill Stand	UPG-GS-GT/GTX	680599113215
Grill Time Pizza Stone for Tailgater GTX	UPG-PS-GTX	680599113222
Grill Time Griddle for Tailgater GT	UPG-CG-GT/GTX	680599113239
Grill Time 4 in 1 Cooking Tool	GT-CT-4:1	680599113222



Starter Gel Charcoal



Glass Grill Covers



Grill Stands



Pizza Stone (GTX only)



Griddle



4 in 1 Cooking Tool

WARRANTY

Grill Time Inc.
120 Detroit Pkwy.
Morton, IL 61550
live2grill.com
1.855.474.5584

Thank you for purchasing your Grill Time Ultimate Portable Grill which has been manufactured to the highest quality standards, and is guaranteed for a period of 48 months from the date of purchase against manufacturing defects.

If your grill fails due to a defect in material or workmanship within 48 months, please call the telephone number above.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service center.

Due to continuous product improvement, Grill Time reserves the right to change the product specifications without prior notice.



Grill Time Warranty Card

Model No.: Tailgater GT Tailgater GTX

SKU Number: _____

UPC Number: _____

Customer Name: _____

Address: _____

Tel.: _____

Date of Purchase: _____

Place of Purchase: _____

Address: _____

Email: _____

Tel.: _____