



SERVICE PARTS LIST

BULLETIN NO.**54-40-1602**

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS				REVISED BULLETIN	DATE
CORDLESS SAWZALL®				54-40-1601	Jan. 2007
CATALOG NO.	6515-20	STARTING SERIAL NO.	971C	WIRING INSTRUCTION	
				58-01-0790	

EXAMPLE:

00 0
Component Parts (Small #)
Are Included When Ordering
The Assembly (Large #).

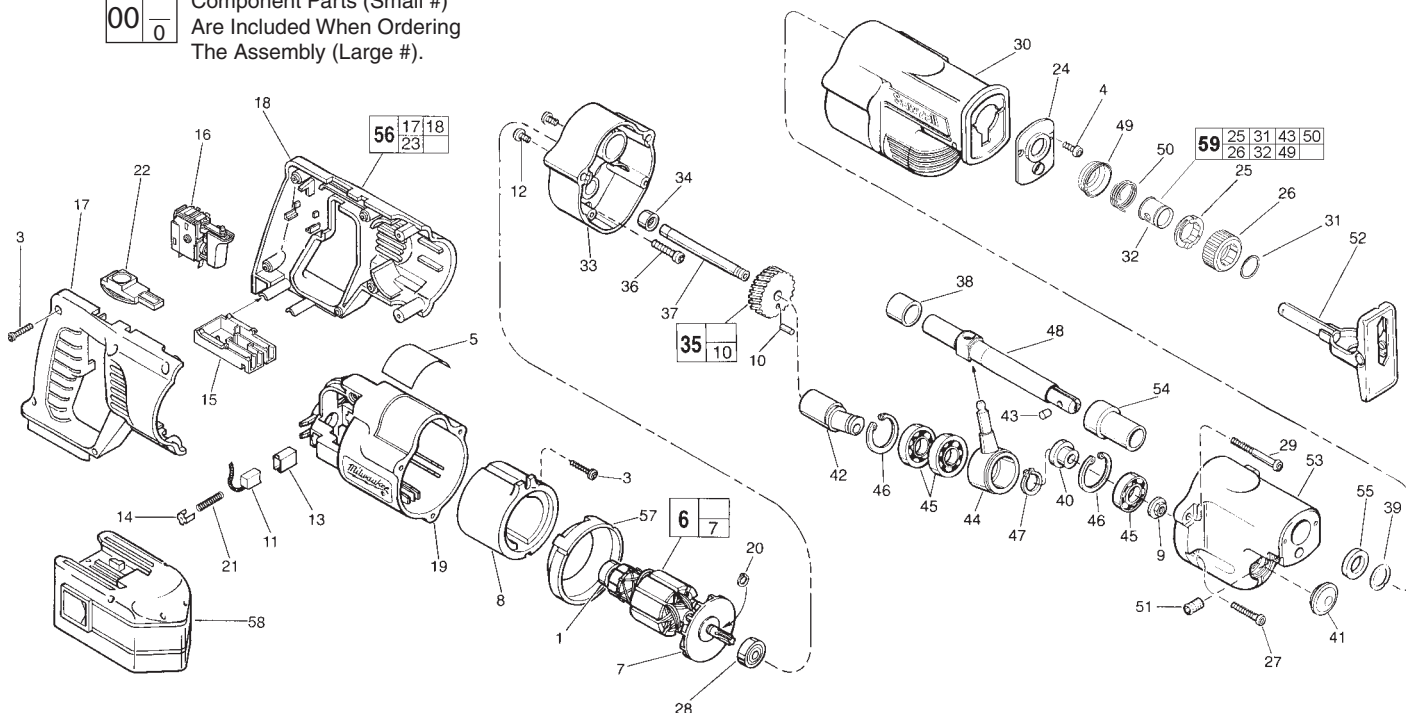


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	02-04-5130	Ball Bearing	(1)
3	06-82-7261	6-19 x 11/16" Pan Hd. Slit. Plastite T-15	(8)
4	06-95-0080	6-32 x 1/2" Truss Hd. Taptite T-10 Screw	(2)
5	12-20-1425	Service Nameplate Kit	(1)
★ 6	16-01-1140	Armature	(1)
★ 7	22-84-0950	Fan Assembly	(1)
★ 8	18-01-0070	Field	(1)
9	06-55-3790	5/16-24 Spinlock Hex Nut	(1)
10	06-65-0606	3/16" x 1/2" Drivelok Pin	(1)
11	22-18-0975	Carbon Brush Assy.-Right	(1)
11A	22-18-0970	Carbon Brush Assy.-Left (Not Shown)	(1)
12	06-82-7252	8-32 x 3/8" Pan Hd. Taptite T-20	(2)
13	22-20-0860	Brush Tube	(2)
14	22-32-0400	Brush Spring Clip	(2)
15	22-56-0230	Connector Block	(1)
16	23-66-2351	Switch Assembly	(1)
17	31-44-0750	Handle Half-Right	(1)
18	31-44-0755	Handle Half-Left	(1)
19	31-50-0961	Motor Housing	(1)
★ 20	34-60-0810	External Retaining Ring	(1)
21	40-50-8840	Brush Spring	(2)
22	45-24-0201	Lock Off Slide	(1)
24	44-86-0615	Seal Retainer	(1)
25	42-50-0077	Cam Collar	(1)
26	42-50-0076	Front Cam	(1)
27	06-82-5346	8-32 x 3/4" Pan Hd. Taptite T-20	(2)
★ 28	02-04-1017	Ball Bearing	(1)
29	05-88-8301	K50 x 60mm Pan Hd. PT T-20	(2)
30	45-12-0510	Gear Case Insulator	(1)
31	34-60-3680	External Retaining Ring	(1)
32	45-22-0081	Sleeve	(2)
33	28-28-2080	Diaphragm	(1)
34	02-50-2150	Needle Bearing	(1)
★ 35	32-40-2365	Intermediate Gear Assembly	(1)
36	05-88-8307	K50 x 22mm Pan Hd. PT T-20	(1)
37	42-12-0180	Axle-Wobble Shaft	(1)
38	42-24-0620	Rear Spindle Bearing	(1)
39	45-88-8577	Washer	(1)
40	45-36-1450	Spacer	(1)
41	42-52-0380	Bearing Cap	(1)

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
42	36-92-0740	Wobble Shaft	(1)
43	44-60-0626	Pin	(1)
44	30-72-0111	Wobble Plate	(1)
45	02-04-1510	Ball Bearing	(3)
46	34-80-2600	Internal Retaining Ring	(2)
47	34-60-1315	External Retaining Ring	(1)
48	38-50-6005	Reciprocating Spindle	(1)
49	31-15-0511	Spring Cover	(1)
50	40-50-0161	Torsion Spring	(1)
51	06-83-3151	5/16-18 x 1/2" Hex Socket Hd. Set Screw	(1)
52	45-16-0615	Pivot Shoe Assembly	(1)
53	28-14-2180	Gear Case	(1)
54	42-24-0615	Forward Spindle Bearing	(1)
55	45-06-0500	Felt Seal	(1)
56	31-44-0775	Handle Kit	(1)
57	31-05-0080	Baffle	(1)
58	-----	Battery (Accessory)	(1)
59	14-46-1011	Steel Quik-Lok Blade Clamp Kit	(1)
	49-96-0070	5/32" Hex Key	(1)
	23-94-5890	Leadwire Assy.-Black (See 58-01-0790)	(1)
	23-94-5895	Leadwire Assy.-White (See 58-01-0790)	(1)

FIG. 11, 11A, 13 **NOTES:**
Remove Brushes And Brush Tubes To Prevent Damage
When Installing Or Removing Armature From Motor Hsg.

**SEE REVERSE SIDE FOR
IMPORTANT SERVICE NOTES**

MILWAUKEE ELECTRIC TOOL CORPORATION
13135 W. LISBON RD., BROOKFIELD, WI 53005
Drwg. 2