

Water Closets

Wall Hung Water Closets

ST-2000 WALL HUNG SERIES

Item No.	Code No.	Part No.	Description
1.	2102059	ST-2059-A	Top Spud 1.1 to 1.6 gpf (4.2 to 6.0 Lpf) Universal Wall Hung Closet - Discontinued
2.	2102060	ST-2060-A	HET Rear Spud 1.28 gpf (4.8 Lpf) Wall Hung Closet - Discontinued
	2102063	ST-2063-A	Rear Spud 1.6 gpf (6.0 Lpf) Wall Hung Closet
	2112059	ST-2059-A-BPL	Top Spud 1.1 to 1.6 gpf (4.2 Lpf to 6.0 Lpf) Bedpan Lug Universal Wall Hung Closet - Discontinued
3.	2102459	ST-2459	Top Spud 1.1 to 1.6 gpf (4.2 to 6.0 Lpf) Universal Wall Hung Closet
	2112459	ST-2459-BPL	Top Spud 1.1 to 1.6 gpf (4.2 Lpf to 6.0 Lpf) Bedpan Lug Universal Wall Hung Closet
4.	2102469	ST-2469	Rear Spud 1.1 to 1.6 gpf (4.2 to 6.0 Lpf) Universal Wall Hung Closet



Floor Mount Closets

ST-2000 FLOOR MOUNT SERIES

Item No.	Code No.	Part No.	Description
1.	2102009	ST-2009	Top Spud 1.1 to 1.6 gpf (4.2 to 6.0 Lpf)
	2102029	ST-2029	Top Spud 1.6/1.1 gpf (4.2 to 6.0 Lpf) ADA
	2112029	ST-2029BPL	Top Spud 1.6/1.1 gpf (4.2 to 6.0 Lpf) ADA Bedpan Lug Universal Floor Mount Closet
	2102449	ST-2449	Top Spud 1.1 to 1.6 gpf (4.2 to 6.0 Lpf) Universal Floor Mount TAS Closet
2.	2102019	ST-2019	Rear Spud 1.6 gpf (6.0 Lpf) Universal Floor
	2102039	ST-2039	Mount Closet Rear Spud 1.1/1.6 gpf (4.2 to 6.0 Lpf) ADA Universal
3.	2102229	ST-2229	Top Spud 1.1 to 1.6 gpf (4.2 to 6.0 Lpf) ADA Universal Floor Mount Rear Outlet Closet
4.	2102309	ST-2309	Top Spud 1.1 to 1.6 gpf (4.2 to 6.0 Lpf) Universal Junior Toilet
	0319127	ST-27-A	Spud Assembly 1 1/2" - All Closets (not shown)
5.	2112539	ST-2539-LR	Rear Spud 1.28 to 1.6 gpf (4.8 to 6.0 Lpf) Universal Floor Mount Rear Outlet Closet



Discontinued



Discontinued



Wall Hung & Floor Mount Water Closets

TROUBLESHOOTING GUIDE

- 1. Water does not shut off in bowl.**
 - A. Contact Sloan Technical Support at 1-888-SLOAN-14 (1-888-756-2614).
 - B. Supply pressure too low. Minimum flowing pressure must be 25 PSI. Adjust supply pressure.
- 2. Water is leaking from toilet.**
 - A. Toilet is not properly mounted. Tighten toilet mount nuts.
 - B. Toilet is not properly mounted. Replace gasket seal.
- 3. Toilet emits odor.**
 - A. Plugged vent line. Remove or clear obstruction in vent line.
- 4. Poor or sluggish flush.**
 - A. Supply pressure too low. Water supply must be able to provide 18 gpm at 25 psi.
 - B. Partially clogged trapway and/or drain pipe and/or vent. Remove or clear obstruction in vent line.
- 5. Incomplete evacuation.**
 - A. Improper Flushometer control stop setting. Close control stop and gradually open until full evacuation is achieved.

IMPORTANT INFORMATION

1. Do not use harsh or caustic chemicals such as drain opening types in this system. These products will damage the vitreous finish.
2. Do not permit foreign objects (i.e., paper towels, paper cups, sanitary napkins, etc.) to be flushed through the toilet.
3. The toilet must be regularly cleaned. See CARE AND CLEANING for details.

CARE AND CLEANING

Sloan's toilets should be cleaned regularly for maximum sanitary and operational performance. As with any plumbing product consistency is important to achieve efficiency and general cleanliness. Before you begin to clean a toilet, gather all the needed materials including personal protection equipment, such as gloves and eyewear.

What You'll Need:

Goggles/safety glasses
Toilet Brush
Gloves
Cleanser for inside the bowl
Cleanser for outside the bowl
Paper towels or cloth

Inside Toilet Bowl:

Add your choice of powder, liquid or gel cleanser to the bowl*. Try to apply the cleaner as close to the toilet rim as possible to prevent diluted cleanser. Begin cleaning the bowl from the top down. Always begin scrubbing under the rim first. Look under the rim to get all the stains and grime scrubbed away. Next scrub the bowl. Finally scrub the drain at the bottom of the bowl.

Flush the toilet.

Outside Toilet:

Using a disinfectant/detergent cleaner, mixed either in a spray bottle or in a bucket (according to label instructions), spray or wipe down all the hard surfaces outside of the bowl paying close attention to high touch areas like the toilet seat and flushometer. **NOTE: DO NOT use abrasive or chemical cleaners (including chlorine) to clean flushometers that may dull the luster and attack the chrome or special decorative finishes. Use ONLY mild soap and water, then wipe dry with a clean towel or cloth. If cleaning the fixture with an abrasive or chemical cleaner protect the flushometer from any splattering of cleaner. Acids and cleaning fluids will discolor or remove the finish.** The toilet seat should never be neglected. It is the part of the toilet that comes into actual contact with people, and it needs to be cleaned thoroughly. Raise the seat. Spray the seat, inside lid (if applicable) and the rim of the toilet with cleanser. Wipe down the lid, seat and hinges at the back of the toilet seat.

Wipe Up Spills:

Wipe up any spills that may have splashed or occurred during cleaning.

Service Tip:

Checking for water leaks around toilet fixtures can be difficult to locate the source. Place paper towels around suspected area. It is best to start at the top of the fixture since gravity will cause the water leak to run downward.

When assistance is required, please contact

Sloan Technical Support at: 1-888-SLOAN-14 (1-888-756-2614).

*Consult your local janitorial supply to advise best cleansers to use for local water types. Always use cleaners according to their instructions.

Pressure-assisted Toilets



WETS-8000 Series

Model Description	GPF	Handle	Rough-in	Standard Glaze	Sloan TecGlaze
ST-8016 Pressure Assist Tank Assembly	1.0	Left Hand	12"	2108016	-
ST-8010 Pressure Assist Tank Assembly	1.28	Left Hand	12"	2108010	-
ST-8013 Pressure Assist Tank Assembly	1.6	Left Hand	12"	2108013	-
ST-8116 Pressure Assist Tank Assembly	1.0	Right Hand	12"	2108116	-
ST-8110 Pressure Assist Tank Assembly	1.28	Right Hand	12"	2108110	-
ST-8113 Pressure Assist Tank Assembly	1.6	Right Hand	12"	2108113	-
ST-8009 Standard Height PA Bowl	1.0 to 1.6	-	10" or 12"	2108009	2178009
ST-8029 ADA Height PA Bowl	1.0 to 1.6	-	10" or 12"	2108029	2178029

Pressure-assisted Toilets

TROUBLESHOOTING GUIDE

1. Poor Flush.

- A. Check the overall height of the lever in comparison to the frame, and adjust if required.
- B. Make sure water supply valve is fully open.
- C. Flush the supply line to clear any debris and clean inlet screen.
- D. Check bowl (main jet, rim holes and trapway), drain line, and vent for blockage.
- E. Check water pressure supply, operating range is 20-80 PSI (503 Series), 25-80 PSI (504 Series).

2. Pressure vessel takes a long time to fill.

- A. Make sure water supply valve is fully open.
- B. Flush the supply line to clear any debris and clean inlet screen.
- C. Check water pressure supply, operating range is 20-80 PSI (503 Series), 25-80 PSI (504 Series).

3. Noisy pressure vessel water refill.

- A. Flush the supply line to clear any debris and clean inlet screen.
- B. Flush the toilet and hold the handle down for 30 to 40 seconds to flush the system.

4. Water continues to flow through the vessel and will not refill.

- A. Check the overall height of the lever in comparison to the frame, the cable connection to the frame and lever, and adjust if required.
- B. Make sure water supply valve is fully open.
- C. Flush the supply line to clear any debris and clean inlet screen.
- D. Check cartridge and adjust if required.

5. Handle does not activate flush.

- A. Check the cable cassette connection to handle the cable connection to the frame and lever, and adjust if required.
- B. Make sure water supply valve is fully open.
- C. Flush the supply line to clear any debris and clean inlet screen.

6. If the water rises in bowl during the flush and stays there, or drains slowly.

- A. Check bowl (main jet, rim holes and trapway), drain line, and vent for blockage.

7. Leaking tanks.

- A. Check the tank-to-bowl gasket to ensure it is aligned properly and tighten the tank bolts.
- B. Check tank for cracks. If cracked the tank must be replaced.
- C. Check tank bolts. Rubber washers may be corroded or bolts may be loose. Replace or tighten as necessary.

NOTE: be careful not to overtighten nuts on tank as this may result in cracking the tank.

NOTE: It is normal to have some residual water (less than 1") inside the tank.

The vessel is equipped with a drain valve to drain off excess water.

Cleaning & Maintenance

Clean water closet at least once per week with a cleaner safe for vitreous china.

Spray and wipe clean using soft cloth.

Soft abrasive cleaners may be used to remove stains. If you live in a hard water area, you should make certain that the holes under the rim are kept clean and free of mineral build up for proper bowl performance. Use a long-handled brush to clean the rim holes.

Make sure to periodically clean the in-line filter located in the water inlet of the water supply valve.

CAUTION: Do not use any in-tank cleaners or deodorizers. Products containing chlorine (calcium hypochlorite) can seriously damage the Flushmate as well as the fittings in your tank. This damage can cause leakage and property damage. For more complete up-to date information please visit us at www.sloan.com.

If further assistance is required, If you should still have trouble contact Sloan Technical Support at: 1-888- SLOAN-14 (1-888-756-2614)

Gravity Toilets



WETS-4000 Series

Model Description	GPF	Handle	Rough-in	Standard Glaze	Sloan TecGlaze
ST-4010 Gravity Tank Assembly	1.28	Left Hand	12"	2104010	21740092
ST-4011 Gravity Tank Assembly	1.1	Left Hand	12"	2104011	21740093
ST-4013 Gravity Tank Assembly	1.6	Left Hand	12"	2104013	21740094
ST-4110 Gravity Tank Assembly	1.28	Right Hand	12"	2104110	21740095
ST-4111 Gravity Tank Assembly	1.1	Right Hand	12"	2104111	21740096
ST-4113 Gravity Tank Assembly	1.6	Right Hand	12"	2104113	21740097
ST-4210 Gravity Tank Assembly	1.28	Left Hand	10"	2104210	21740098
ST-4211 Gravity Tank Assembly	1.1	Left Hand	10"	2104211	21740099
ST-4213 Gravity Tank Assembly	1.6	Left Hand	10"	2104213	21740100
ST-4310 Gravity Tank Assembly	1.28	Right Hand	10"	2104310	21740101
ST-4311 Gravity Tank Assembly	1.1	Right Hand	10"	2104311	21740102
ST-4313 Gravity Tank Assembly	1.6	Right Hand	10"	2104313	21740103
ST-4009 Standard Height Gravity Bowl	1.1 to 1.6	.	10" or 12"	2104009	2174009
ST-4029 ADA Height Gravity Bowl	1.1 to 1.7	.	10" or 12"	2104029	21740091

Gravity Toilets

TROUBLESHOOTING GUIDE

1. Poor Flush.

- A. Confirm tank is refilling to the water level marked on the refill tube. Adjust as needed.
- B. Check bowl (main jet, rim holes and trapway), drain line, and vent for blockage.

2. Tank takes a long time to fill.

- A. Make sure water supply valve is fully open.
- B. Flush the supply line to clear any debris.
- C. Check water pressure supply, operating range is 5-80 psi.

3. Water continues to run on and will not shut off.

- A. Remove tank lid and confirm the flapper chain is not kinked and has adequate slack to allow flapper to fully seal.
- B. Inspect the rubber seal on the flapper and the top edge of the flush valve to ensure they are clean and free from mineral build-up or debris. Replace flapper if required.

4. Handle does not activate flush.

- A. Remove tank lid and check the flapper chain connection and reattach.
- B. Confirm chain has adequate slack by flushing the toilet. Adjust as needed.

5. Toilet seems to be leaking (water on floor).

- A. Check the tank-to-bowl gasket to ensure it is aligned properly and tighten the tank bolts.
- B. Check tank for cracks. If cracked the tank must be replaced.
- C. Check tank bolts. Rubber washers may be corroded or bolts may be loose. Replace or tighten as necessary.

NOTE: Be careful not to overtighten nuts on tank as this may result in cracking the tank.

- D. Check around the base of the toilet for leaks. If water is coming from underneath the toilet should be removed to inspect the wax gasket and replaced as needed.

CARE AND CLEANING

Clean water closet at least once per week with a cleaner safe for vitreous china. Spray and wipe clean using soft cloth. Soft abrasive cleaners may be used to remove stains.

- If you live in a hard water area, you should make certain that the holes under the rim are kept clean and free of mineral build up for proper bowl performance. Use a long-handled brush to clean the rim holes. Do not use any in-tank cleaners or deodorizers. Products containing chlorine (calcium hypochlorite) can seriously damage your toilet fittings in the tank. This damage can cause leakage and property damage.

Washdown Urinals



1



2

STANDARD URINAL SERIES			
Item No.	Code No.	Part No.	Description
1.	1101000	SU-1000-A	HEU Top Spud 0.125 gpf (0.5 Lpf) Standard Urinal
	1101002	SU-1002-A	HEU Top Spud 0.25 gpf (1.0 Lpf) Standard Urinal
	1101005	SU-1005-A	HEU Top Spud 0.5 gpf (1.9 Lpf) Standard Urinal
	1101006	SU-1006-A	Top Spud 1.0 gpf (3.8 Lpf) Standard Urinal
	1101009	SU-1009	HEU Top Spud 0.125 to 1.0 gpf (0.5 to 1.0 Lpf) Universal Standard Urinal
2.	1101010	SU-1010-A	HEU Rear Spud 0.125 gpf (0.5 Lpf) Standard Urinal
	1101012	SU-1012-A	HEU Rear Spud 0.25 gpf (1.0 Lpf) Standard Urinal
	1101015	SU-1015-A	HEU Rear Spud 0.5 gpf (1.9 Lpf) Standard Urinal
	1101016	SU-1016-A	Rear Spud 1.0 gpf (3.8 Lpf) Standard Urinal
	1101019	SU-1019	HEU Rear Spud 0.125 gpf to 1.0 gpf (0.5 Lpf to 3.8 Lpf) Standard Urinal

Discontinued

Discontinued



3



4

RETROFIT URINAL SERIES			
Item No.	Code No.	Part No.	Description
3.	1101200	SU-1200-A	HEU Top Spud 0.125 gpf (0.5 Lpf) Retrofit Urinal
	1101202	SU-1202-A	HEU Top Spud 0.25 gpf (1.0 Lpf) Retrofit Urinal
	1101205	SU-1205-A	HEU Top Spud 0.5 gpf (1.9 Lpf) Retrofit Urinal
	1101209	SU-1209	HEU Top Spud 0.125 to 0.5 gpf (0.5 to 1.9 Lpf) Universal Retrofit Urinal
4.	1101210	SU-1210-A	HEU Rear Spud 0.125 gpf (0.5 Lpf) Retrofit Urinal
	1101212	SU-1212-A	HEU Rear Spud 0.25 gpf (1.0 Lpf) Retrofit Urinal
	1101215	SU-1215-A	HEU Rear Spud 0.5 gpf (1.9 Lpf) Retrofit Urinal
	1101219	SU-1219	HEU Rear Spud 0.125 to 0.5 gpf (0.5 to 1.9 Lpf) Universal Retrofit Urinal

Discontinued

Discontinued



5



6

SMALL URINAL SERIES			
Item No.	Code No.	Part No.	Description
5.	1107009	SU-7009	HEU Top Spud 0.125 to 1.0 gpf (0.5 to 3.8 Lpf) Universal Small Urinal
	1107006	SU-7006	Top Spud 1.0 gpf (3.8 Lpf) Small Urinal
6.	1107019	SU-7019	HEU Rear Spud 0.125 to 1.0 gpf (0.5 to 3.8 Lpf) Universal Small Urinal
	1107016	SU-7016	Rear Spud 1.0 (3.8 Lpf) Small Urinal
7.	1107409	SU-7409	Top Spud 0.125 to 1.0 gpf (0.5 to 3.8 Lpf) Universal Small Urinal
8.	1107419	SU-7419	HEU Rear Spud 0.125 to 1.0 gpf (0.5 to 3.8 Lpf) Universal Small Urinal

Discontinued

Discontinued



7



8

ACCESSORIES

0319147	SU-47-A	Spud Assembly ¾" - All Urinals (not shown)
0319060	SU-20-A	Small Urinal Mounting Hardware Kit (not shown)
0319105	SU5A	Urinal strainer assembly
0319115	SU13A	Standard urinal mounting hardware kit

Hybrid & Waterfree Urinals



HYBRID URINAL

Item			
No.	Code No.	Part No.	Description
1.	1001020	HYB-1000	Vitreous China Standard Hybrid Urinal (14" x 19 5/8" x 26 3/4")
2.	1001021	HYB-1000 RET	Vitreous China Retrofit Hybrid Urinal (14 3/8" x 16 5/8" x 26 3/4")
3.	1004020	HYB-4000	Vitreous China Hybrid Urinal (14" x 15 3/8" x 22 5/8")
4.	1007020	HYB-7000	Vitreous China Hybrid Urinal DISCONTINUED (14 5/8" x 12 3/4" x 21 7/8")

WATERFREE URINALS

Item			
No.	Code No.	Part No.	Description
5.	1001000	WES-1000	Vitreous China Standard Waterfree Urinal (14 3/8" x 19 5/8" x 26 3/4")
6.	1004000	WES-4000	Vitreous China Small Waterfree Urinal (14" x 15 3/8" x 22 5/8")
7.	1007000	WES-7000	Vitreous China Designer Waterfree Urinal (DISCONTINUED) (14 5/8" x 12 3/4" x 21 7/8")