
INSTALLATION & OPERATING INSTRUCTION

2101 - BLOWER ACCESSORY

- REPLACEMENT PARTS -

(350, 500, & 650 MODEL SERIES ONLY)

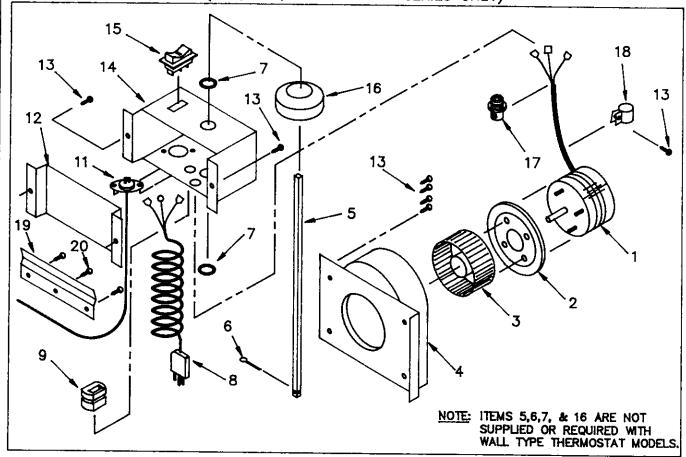

- REPLACEMENT PARTS LIST - (USE ONLY MANUFACTURES AUTHORIZED PARTS)

PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
P500250	ASSEMBLY, MOTOR	11	P500263	FAN LIMIT SWITCH
K7003-6087	PLATE, MOTOR MTG.	12	K000062	BASE, CONTROL BOX
P500137	BLOWER WHEEL	13	P065800	SCREW, #10 X 1/2
K5150-6029	ASSY, BLOWER HOUSING	14	K000061	WRAPAROUND CONTROL BOX
SEE PAGE 21 ITEM 18	CONTROL ROD	15	P320911A	SPEED SELECT SWITCH
P500125	COTTER PIN	16	SEE PAGE 21	TEMPERATURE DIAL
P500026	GROMMET, WHITE	17	P500145	SET SCREW, BOX CON.
P500156	CORD & PLUG	18	K000143	CABLE CLAMP
P500158	BUSHING - STRAIN	19	PART OF FURNACE	SENSOR MOUNTING BRACKET
P097500	SCREW, #8-32 X 3/8	20	PART OF FURNACE	SCREW, #8 X 3/8 S.M.
	PART NO. P500250 K7003-6087 P500137 K5150-6029 SEE PAGE 21 ITEM 18 P500125 P500026 P500156 P500158	PART NO. DESCRIPTION P500250 ASSEMBLY, MOTOR K7003-6087 PLATE, MOTOR MTG. P500137 BLOWER WHEEL K5150-6029 ASSY, BLOWER HOUSING SEE PAGE 21 CONTROL ROD P500125 COTTER PIN P500026 GROMMET, WHITE P500156 CORD & PLUG P500158 BUSHING — STRAIN	PART NO. DESCRIPTION NO. P500250 ASSEMBLY, MOTOR 11 K7003-6087 PLATE, MOTOR MTG. 12 P500137 BLOWER WHEEL 13 K5150-6029 ASSY, BLOWER HOUSING 14 SEE PAGE 21 ITEM 18 CONTROL ROD 15 P500125 COTTER PIN 16 P500026 GROMMET, WHITE 17 P500156 CORD & PLUG 18 P500158 BUSHING — STRAIN 19	PART NO. DESCRIPTION NO. PART NO. P500250 ASSEMBLY, MOTOR 11 P500263 K7003-6087 PLATE, MOTOR MTG. 12 K000062 P500137 BLOWER WHEEL 13 P065800 K5150-6029 ASSY, BLOWER HOUSING 14 K000061 SEE PAGE 21 ITEM 18 CONTROL ROD 15 P320911A P500125 COTTER PIN 16 SEE PAGE 21 ITEM 24 P500026 GROMMET, WHITE 17 P500145 P500156 CORD & PLUG 18 K000143 P500158 BUSHING — STRAIN 19 PART OF FURNACE

NOTE: Screws, bolts and washers are standard hardware items and may be purchased locally.