Mirrorscapes Technical Specification

3000 Series

Stock Numbers:

 MS3048 – 4' Decorative Straight (1 pair)

ORB = Oil Rubbed Bronze Finish

AZ = Antique Bronze Finish

AN = Antique Nickel Finish

■ MS3072 – 6' Decorative Straight (1 pair)

ORB = Oil Rubbed Bronze Finish

AZ = Antique Bronze Finish

AN = Antique Nickel Finish

 MS3096 – 8' Decorative Straight (1 pair)

ORB = Oil Rubbed Bronze Finish

AZ = Antique Bronze Finish

AN = Antique Nickel Finish

ORB = Oil Rubbed Bronze Finish

AZ = Antique Bronze Finish

AN = Antique Nickel Finish


■ ME3055 – Decorative Extensions (2 extensions)

ORB = Oil Rubbed Bronze Finish

AZ = Antique Bronze Finish

AN = Antique Nickel Finish

Dimensions:

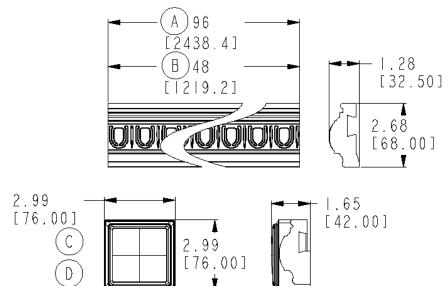

Installation Instructions:

- 1. Remove backing to expose adhesive on mounting brackets.
- 2. Position corner template on the mirror.
- 3. Guided by corner template, secure corner mounting bracket to mirror.
- 4. Once mounting bracket is secured, remove corner template.
- 5. Repeat for all corners.
- 6. Center straight template at edge of mirror.
- 7. Guided by straight template, secure straight mounting bracket to mirror.
- 8. Once mounting bracket is secured, remove straight mounting template.
- 9. Repeat on all sides of mirror.
- 10. Attach decorative corners onto corner mounting brackets.
- With a marker, trace a line on the mirror along the inner edges of the corner brackets.
- 12. Remove decorative corners.
- 13. Measure between marked lines to determine lengths of straight pieces.
- 14. Cut straight pieces to measurements made in step 13.
- 15. Press straight pieces onto mounting brackets.
- 16. Press decorative corners onto mounting brackets.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft cloth. Do not use commercial or abrasive cleaners.

Stock Number:	Mirrorscapes
By Creative Specialties	·

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070
CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636
INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726
CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720
©Copyright Creative Specialties International
Literature #BA1411



3000 series straights are wood. **Corners** are wood. **Mounting brackets** are ABS plastic.

