
# American Standard











## American Standard is devoted to making life, in the heart of your home, better every day...

...so, thank you for inviting us in! With the very best in kitchen and bathroom products, we are here to help make your life happier, healthier and simpler. Our commitment to quality, innovation and performance has made us part of your everyday routine for nearly 150 years, and we look forward to being a part of your life for many years to come.

## Learn more at www.AmericanStandard.com

## REGISTER WARRANTY

Try the easy-scan **QR code** to quickly enter your information or find your product's detailed warranty here:



## AmericanStandard-us.com/support/warranty

Registering allows you to keep your product information safe, and us the ability to contact you in the event of a product recall or any news about your purchase.

And if ever you have a question or need help...?

Call us at 1-855-815-0004




730555-100 Rev. 8 (5/24)

## **OWNERS MANUAL Undercounter Sinks**

#### **INSTALLATION INSTRUCTIONS**

- Inspect your product thoroughly before installing. Take extra care in handling surfaces of the sink and use only non-abrasive cloths to avoid scratching. Report any damages or missing parts immediately to customer care by calling 855-815-0004. Follow the prompts for consumer/bathing. Local building codes vary by location.
- Observe all local plumbing and building codes.
- Please keep these instructions for after care and customer service details.

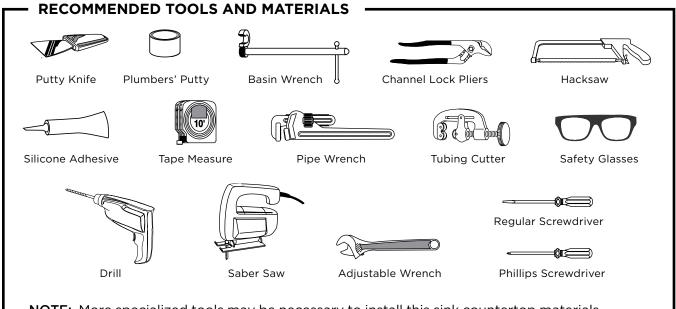


**NOTE:** More specialized tools may be necessary to install this sink countertop materials other than wood or wood composites.

1

**NOTE:** To avoid damage to countertop, install sink such that future removal from underneath the countertop is possible.


First, make sure the clearance between the backsplash, faucet, fixtures and cabinets are acceptable for the new sink.

For Model 0426 to be ADA compliant the sink must be installed with the overflow in the rear.

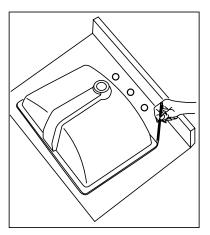

2


Carefully cut out the enclosed template, then position and trace the template on the countertop as shown on the template. Make a mark of the faucet hole centerline on the countertop. Drill a 1/2" pilot hole on the inside of the cut line. Use a saber saw or a keyhole saw to cut out the countertop opening.

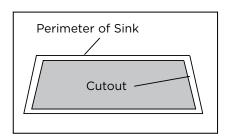

3

## FOR WOOD COUNTETRTOP


Mark and pre-drill the wood screw holes as located on the enclosed template. Waterproof any exposed areas of wood.

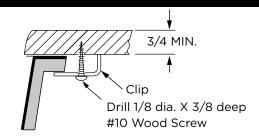

4


### FOR MARBLE OR SOLID SURFACE COUNTERTOP

To protect countertop, place it on a foam padding and drill 3/8 Dia. X 1/2 deep hole as per location shown on template.

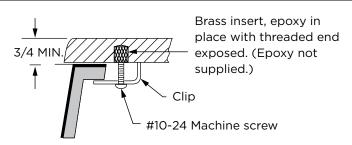


730555-100 Rev. 8 (5/24)

Mount the drain assembly (not included) on the sink, following faucet manufacturer's instructions. Be certain to apply a bead of sealing putty on the underside of the drain (Part "A") in order to ensure a watertight seal between the sink and drain. Remove excess putty after installing drain on sink.

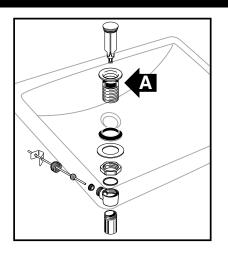

6


**NOTE:** Do not use adhesives or adhesive sealants. After checking fit and alignment of sink to cut out, apply a bead of silicone adhesive to rim of sink.

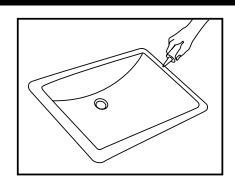


7

Center bowl over cutout and tighten screws (see 3 or 4) to secure bowl to countertop. Remove excess sealant from inside lip.

**NOTE:** The screws provided should be used on countertops with a minimum 1" thickness. For thinner countertops, use appropriate anchors and fasteners.

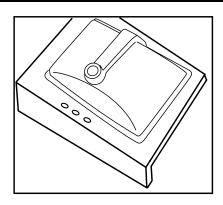


Install faucet (not included) and countertop (not included) following manufacturers instructions.

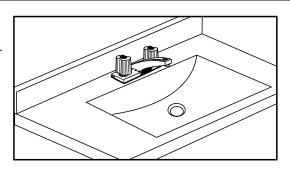


9

Connect supply line to faucet (finger tight) and carefully bend tubes to engage with the supply shut-off valves. Tighten connections at faucet and shut-off valves for water tight seal.

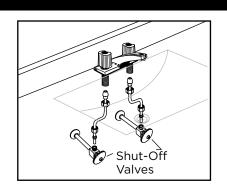

10

Connect trap to drain assembly hand tight to check alignment. It may be necessary to cut off part of the tailpiece (area "B") or part of the horizontal leg of the trap (area "C"). Secure joints for watertight assembly.

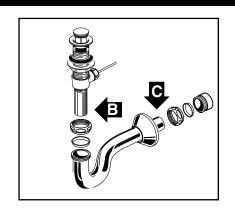

## POST INSTALLATION CLEAN-UP .

Remove all construction debris. Install any accessories, shelves or doors according to manufacturer's installation instructions.

Post installation clean-up generally can be completed using warm water and liquid dishwashing detergent. Stubborn dirt or stains may be removed using granular Spic and Span® mixed with water.

Painter's naphtha can be used to remove excess adhesives and/or wet oil-base paint.

#### AFTERCARE AND CLEANING

Clean after use with a mild liquid household detergent cleaner. Abrasive cleaners such as Lestoil\*, Lysol\* Disinfectant (spray or concentrate), or Lysol\* Basin, Tub and Tile Cleaner, Windex\*, Mr. Clean\*, Dow\* Disinfectant Bathroom Cleaner, or cleaning products in aerosol cans should not be used.

#### DO NOT USE HARSH CHEMICALS ON SINK SURFACE

Do not use wire brushes, knives or sharp objects to remove stains, cigarette tar deposits, or other surface blemishes. Abrasive cleaners or powders must not be used, since they will dull the surface.

Do not wax areas where you walk or stand.

Do not allow nail polish remover, acetone, dry cleaning fluid, paint remover or other solvents to come into contact with the surface.

Clean the surrounding surface immediately after using caustic drain cleaners.

Burning cigarettes will damage the surface.

Should damage to the fixture occur, repairs can be made quickly and easily. Your distributor or builder can provide details.

SPIC AND SPAN\* is a registered trademark of The Spic And Span Company LESTOIL\* is a registered trademark of the Clorox Company LYSOL\* is a registered trademark of Reckitt Benckiser WINDEX\* is a registered trademark of S.C. Johnson & Son, Inc MR. CLEAN\* is a registered trademark of Agile Pursuits Franchising, Inc. DOW\* is a registered trademark of Dow Chemical Company