
# **Specialty Products**

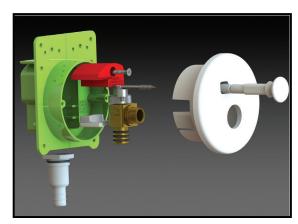

## **SPECIFICATION**

Furnish and install the Pull Stop Box™ outlet box as manufactured by LSP Products Group.

## **DESIGN FEATURES**

- Patented box design moves the anglestop for toilet and lavatory water supply into the wall.
- Allows angle stops to be installed during the rough-in phase and be pressure tested for reduced liability and labor.
- Easy to install vertically, upside down, and horizontally.
- Eliminates the need for a copper stub out and associated bracketing.
- Unique push-pull handle opens and closes the valve.
- Integrated, replaceable valve has a reliable triple o-ring design.
- 5 Year Limited Warranty.

# **COMPLIANCES/LISTINGS**







- Low Lead File 6371
- NSF Standard 61
- Complies with the applicable sections of the latest edition of the Uniform Plumbing Code®

# **CAUTION**

- Keep away from solvents/cements/primers
- Keep out of sun



## PRODUCTS GROUP

3689 Arrowhead Drive, Carson City, NV 89706 Phone (800) 854-3215 Fax (800) 243-1777


E-mail sales@lspproducts.com Website www.lspproducts.com/pullstopbox


Content matter is subject to change at any time. It is the user's responsibility to ensure the most updated revisions are obtained. SP/SH (02-12) Rev 2

# PULL STOP BOX™

**Specification Sheet** 

# **DIMENSIONS**

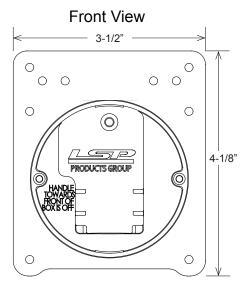

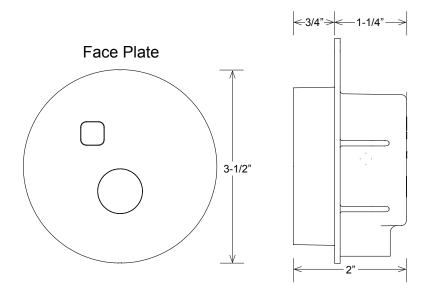

Product Submittal		
Job Name:		
Date:		
Part Number	Quantity	
Architect:		
Contractor:		

# **Specialty Products**\*\*The state of the state of the

# **PULL STOP BOX™**

**Specification Sheet** 

Part Number	Inlet Type	
ROUGH-IN KIT - includes box, valve, and protective cover		
OBPS-101-RK	½" Sweat	
OBPS-102-RK	½" CPVC	
OBPS-103-RK	½" PEX (Vanguard and Zurn)	
OBPS-104-RK	½" Wirsbo PEX	
OBPS-101-RK-LL	½" Sweat Lead Free	
OBPS-102-RK-LL	½" CPVC Lead Free	
OBPS-103-RK-LL	½" PEX (Vanguard and Zurn) Lead Free	
OBPS-104-RK-LL	½" Wirsbo PEX Lead Free	

Part Number	Color	
TRIM KIT - includes knob and escutcheon		
OBPS-200-W	White - Paintable - Regular Depth 1/2" to 1-1/8" Depth	
OBPS-300D-W	White - Paintable - Deep Depth 1-1/8"to 1-7/8" Depth(For Cabinets)	

# **ROUGH-IN INSTALLATION INSTRUCTIONS**

- 1. Identify the desired outlet location.
- 2. Attach the supply line to the valve inlet via pipe manufactures recommended practice. (i.e., sweat for copper, solvent cement for CPVC, crimp rings for PEX)
- Fasten the Pull Stop Box<sup>™</sup> using two screws or two nails into a stud or thread a Hyco strap through the mounting bracket slot and secure with a screw. (Do not over tighten screws, or over drive nails)
- 4. The Pull Stop Box™ is shipped in the Off position. Once the box is securely attached to the wall and the supply line is properly attached no further work is necessary during the rough-in phase. The included protective cover will protect the valve during the construction process.



3689 Arrowhead Drive, Carson City, NV 89706 Phone (800) 854-3215 Fax (800) 243-1777

E-mail sales@lspproducts.com Website www.lspproducts.com/pullstopbox

Content matter is subject to change at any time. It is the user's responsibility to ensure the most updated revisions are obtained. SP/SH (02-12) Rev 2

# TRIM INSTALLATION INSTRUCTIONS

- 1. Pull off the protective cover.
- 2. Feed a flexible connector through the escutcheon, and thread a flexible connector onto the valve outlet; tighten to manufacturer specifications.
- 3. Line up the threaded metal arm to fit through the square hole in the escutcheon and push the escutcheon into the outlet box until it is flush with the wall while making sure to feed the threaded metal arm through the square hole.
- 4. Thread the knob onto the threaded metal arm a minimum of four complete turns.
- When water supply is desired push the knob towards the wall to turn the valve on.
- 6. To stop the flow of water: pull the knob out.

Product Submittal		
Job Name:		
Date:		
Part Number		Quantity
Architect:		
Contractor:		