


Current style Royal® (after 09/26/10)

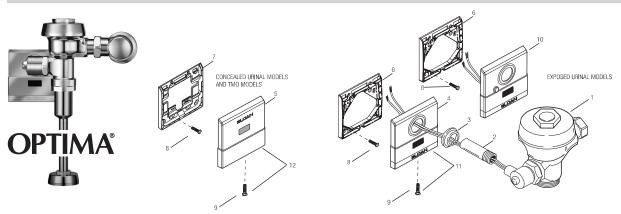


#### **CURRENT COVER AND MOUNTING PLATE PARTS FOR ROYAL® URINAL FLUSHOMETER**

0011				
Item				
No.	Code No.	Part No.	Description	
1.	‡		Solenoid Activated Valve Assembly	
2.	0306249P	<b>K</b> F-15	Tail Assembly 3/4" x 6"	
3.	0345150	EL-431-A	Flange Assembly	
4.	3305100	EL-640-A	CP Cover Plate with Sensor and Mounting Hardware Assembled (Exposed Models) (includes EL-549 mounting plate)	
5.	3305101	EL-645-A	CP Cover Plate with Sensor Assembled (Concealed Models) (includes EL-592 Moutning Plate)	
6.	0305251PK	EL-549-A	Exposed Urinal Mounting Plate Kit	

Item				
No.	Code No.	Part No.	Description	
7.	0305292PK	EL-592-A	Concealed Urinal Mounting Plate Kit	
8.	_		Screws (Flat Head Slotted #6/32)	
9.	5305100	EL-674	Wall Plate Screw Kit (#6-32 x 15.87mm)	
10.	03455361	EL-680-A	CP Cover Plate with Sensor, OR Button and Mounting Hardware Assembled (Exposed Models) (includes EL-549 mounting plate)	
†	3305620	EL-1500	Urinal Sensor Replacement (Exposed and Concealed Models, not shown)	

<sup>†</sup> NOTE: For exposed & concealed solenoids manufactured before 2003 or not shown here, consult factory for individual part assembly. ‡ Part number varies with valve model variation; consult factory.

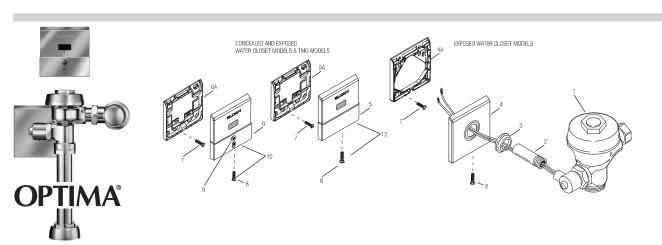

#### **CURRENT COVER AND MOUNTING PLATE PARTS FOR ROYAL® CLOSET FLUSHOMETER**

Item			
No.	Code No.	Part No.	Description
1.	‡		Solenoid Activated Valve Assembly
2.	0306249P	<b>K</b> F-15	Tail Assembly <sup>†</sup>
3.	0345150	EL-431-A	Flange Assembly
4.	3305105	EL-625-A	CP Cover Plate with Mounting Hardware (Closet only) (includes EL-549 mounting plate)
4A.	0305251P	<b>K</b> EL-549	Exposed Closet Mounting Plate
5.	3305107	EL-635-A	Concealed CP TMO Cover Plate with Sensor
			(includes Mounting Kit)
5A.	0305292PI	<b>C</b> EL-592	Concealed Closet TMO Mounting Plate

ltem No.	Code No.	Part No.	Description
6.	3305104	EL-595-A	CP Cover Plate with Sensor and Override Switch Assembled (Closet only) Exposed ES-S
6A.	0305292PK	EL-592	Exposed & Concealed Closet Mounting Plate
7.	_		Screws (Flat Head Slotted #6/32
†	3305621	EL-1500	-L Closet Sensor Replacement Kit (Closet only, not shown)
	3345095	EL-1034	-AButton Assembly Repair Kit
8.	5305100	EL-674	Wall Plate Screw Kit (#6-32 x 15.87mm) (6 per kit)
9.	3345095	EL-1034-	A ESS Override Repair Kit for EL-595-A


† NOTE: For exposed & concealed solenoids manufactured before 2003 or not shown here, consult factory for individual part assembly. ‡ Part number varies with valve model variation; consult factory.

\* Mounting plates do not include sensor. For Solenoid Breakdown. see 58

			modified plates do not include a
Item			
No.	Code No.	Part No.	Description
10.	3345090	EL-1030-A	Plate Assembly Only w/ Set Screw* (plate only for EL-595-A)
11.	3345091	EL-1031-A	Plate Assembly Only w/ Set Screw* (Plate only for EL-640-A)
12.	3345092	EL-1032-A	Plate Assembly Only w/ Set Screw* (Plate only for EL-635-A/EL-645-A)



Old Royal® until 05/09, current Sloan/Regal®

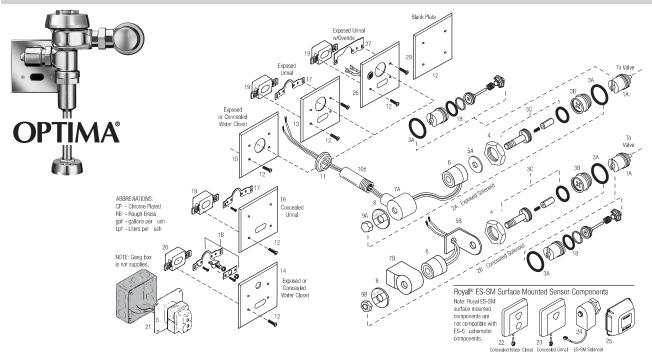

#### SOLENOID/SENSOR PARTS AND ASSEMBLIES LIST


Item					
No.	Code No.	Part No.	Description		
1A.	<b>3305043</b> EL-128-A		Actuator Cartridge Assembly Repair Kit Includes Spring, Plunger Guide, Solenoid Valve Seat, Valve Piston Assembly, and O-Ring (also available for ES-SM flushometers)		
1B.	0305135	EL-110	O-Ring		
2A.	<b>0305328</b> EL-124-1		120V only (no sensor)		
	3305044	EL-1029-A	CP Cartridge/Solenoid Kit EL-124-1 (120V) and EL128-A		
	0305329	EL-124-2	24 VAC Solenoid Assembly (exposed installation) Includes Handle Coupling, 24 VAC Coil, Face Plate for 24 VAC Solenoid, Solenoid Adapter, Solenoid Shaft Assembly, Nut for Solenoid, Solenoid Housing, Solenoid Flux Plate, and O-Ring		
	3305045	EL-1028-A	CP Cartridge/Solenoid Kit EL-124-2 (24V) and EL128-A		
2B.	0305330	EL-138-1	120V only (no sensor)		
	0305331	EL-138-2	24 VAC Solenoid Assembly (concealed installation) Includes Handle Coupling, 24 VAC Coil, Face Plate for 24 VAC Solenoid, Solenoid Adapter, Solenoid Shaft Assembly, Nut for Solenoid, Solenoid Base Plate and Solenoid Cover Assembly		
3A.	0337086PK	<b>0337086PK</b> D0-22			
3B.	0305132PK	EL-104	RB Adapter for Solenoid		
3C.	0305165PK	EL-163-A	Solenoid Shaft Assembly Includes Gasket, Plunger, Plunger Spring, and Solenoid Shaft		
4.	0301082PK	A-6	CP Handle Coupling (exposed installation)		
5A.	0305166PK	EL-164	Solenoid Flux Plate (exposed installation) fine thread		
5B.	_	EL-542	N/A Separately		
6.	0305119PK	EL-165-1	120 V Coil		
	0305118PK	EL-165-2	24 VAC Coil		
7A.	0345120PK	EL-162-2	CP Solenoid Housing (exposed installation) fine thread		
	0305164PK	EL-162-1	CP Solenoid Housing (120V) course thread also used on pre-2001 24 V $$		
7B.	0305967PK	EL-541-A	Solenoid Cover Assembly (Includes Flux Plate)		
8.	0305127PK	EL-102-2	Face Plate for 24 VAC Solenoid (exposed installation)		

Item			
No.	Code No.	Part No.	Description
9A.	0305125PK	EL-101	CP Nut for Solenoid (exposed installation)
9B.	0305167PK	EL-166	Housing Nut for Solenoid (concealed installation)
10.	0306249	F-15	Tail † 3/4" X 6"
	0305145	EL-123-A	Old Style ESS 24V course thread (120V also)
	0305337PK	EL-226	1-1/4" Extension for EL-123-A course thread
11.	0345150	EL-431-A	CP Flange Assembly (exposed installation)
	0305139	EL-176-A	Old Style ESS 24V course thread (120V also)
12.	0305152PK		CP Screws (requires four screws per cover plate) Size# 6-32
13.	0305151PK	EL-151	CP Cover Plate for Sensor and Solenoid Operator (Urinal only) (L/L Variation-0305150)
14.	0305219PK	EL-201	CP Cover Plate for Sensor and Override Button (Closet only)
15.	0318066PK	HY-66	CP Cover Plate for Solenoid Operator (Closet only)
16.	0305161PK	EL-161	CP Cover Plate for Sensor
17.	0305323	EL-168-A	Yoke Assembly (Urinal only)
18.	0305324	EL-141-A	Override Switch and Yoke Assembly (Closet only)
19.	3305620	EL-1500	Urinal Sensor Replacement Kit (Urinal only)
20.	3305621	EL-1500-L	Closet Sensor Replacement Kit (Closet only)
21.	0345154PK	EL-154	Transformer (120 VAC) (also available for ES-SM flushometers) 50 VA plate mount
	0345999PK	EL-342	Transformer (240 VAC) (also available for ES-SM flushometers) 50 VA plate mount
22.	3345047	EL-461	Surface Mounted Sensor and Override Button Assembly (closet only)
23.	3345048	EL-497	Surface Mounted Sensor Assembly (urinal only)
24.	0305802	EL-297	Solenoid Assembly
25.	3365003	ETF-492-A	Control Module
26.	0345266	EL-566-A	Exposed Plate with Override Button (Urinal only)
27.	0345267	EL-567-A	Yoke Assembly for EL-566-A
28.	3345080	EL-1026-A	ESS to TMO Retrofit Kit (Exposed)*
_	0305148	EL-227	Repair Tool Kit for EL-163-A Repair Kit
=	0345016	EL-387-A	Override Button Replacement for EL-566-A
_	3345021	EL-1010-A	O-ring Repair Kit*
29.	0305186PK	EL-139	Blank Plate
† NOTE	: For exposed & co	ncealed solenoid	ds manufactured before 2001 or not shown here,

<sup>†</sup> NOTE: For exposed & concealed solenoids manufactured before 2001 or not shown here, consult factory for individual part assembly. \* Not Shown



# **Optima® Royal® Flushometer**

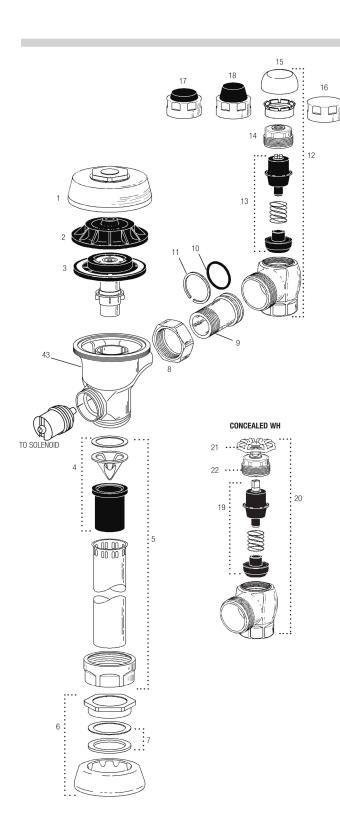

ABBREVIATIONS:
CP Chrome Plated
RB Rough Brass
SD Screwdriver
WH Wheel Handle
gpf gallons per flush
Lpf Liters per flush

ltem					
No.	Code No.	Part No.	Description		
1.	0301172PK	A-72	CP Cover		
2.	0301168	A-71	Inside Cover		
3.	SEE DIAPHR	AGM ASSEM	BLY CHART ON PAGE 24		
4.	3323182	V-651-A	Vacuum Breaker Repair Kit		
5.	3393004	V-600-AA	3/4" (19 mm) x 9" (229 mm) CP Vacuum Breaker		
	3393006	V-600-AA	1-1/4" (32 mm) x 9" (229 mm) CP Vacuum Breaker		
	3393007	V-600-AA	1-1/2" (38 mm) x 9" (229 mm) CP Vacuum Breaker		
6.	0306125	F-5-AW	3/4" (19 mm) CP Spud Coupling Assembly		
	0306140	F-5-AU	1-1/4" (32 mm) CP Spud Coupling Assembly		
	0306146	F-5-AT	1-1/2" (38 mm) CP Spud Coupling Assembly		
7.			AND RINGS TABLE ON PAGE 15		
3.	0308676PK	H-550	CP Stop Coupling		
9. 9.	0308801	H-551-A	CP Adjustable Tail 2-1/16" (52 mm) long		
		H-553			
10.	5308696		O-Ring — 24 per package		
11.	5308381	H-552	Locking ring – 12 per package		
12.	3308386	H-700-A	1" (25 mm) Screwdriver Bak-Chek® Angle Stop CP – complete		
	3308384	H-700-A	3/4" (19 mm) Screwdriver Bak-Chek® Angle Stop CP – complete		
13.	3308853	H-541-A-SD	Control Stop Repair Kit for use with 1" (25 mm) H-700-A & 3/4" (19 mm) H-700-A, 1" (25 mm) H-600-A, 1" (25 mm) & 3/4" (19 mm) H-700-A and 1" (25 mm) H-540-A SD Stops		
	3308856	H-543-A-SD	Control Stop Repair Kit for use with 3/4" (19 mm) H-600-A and H-540-A SD Stops		
14.	0308612PK	H-622 CP	Bonnet for use with 1" (25 mm) & 3/4" (19 mm) H-700-A and 1" (25 mm) H-600-A SD Stops		
	0308843	H-577	CP Bonnet for use with 3/4" (19 mm) H-600-A SD Stops – <b>DISCONTINUED</b>		
15.	3308772	H-1010-A	1" (25 mm) Vandal Resistant Control Stop Cap Assembly for use with 1" (25 mm) & 3/4" (19 mm H-700-A and 1" (25 mm) H-600-A SD Stops		
	3308790	H-1009-A	3/4" (19 mm) Vandal Resistant Control Stop Cap Assembly for use with 3/4" (19 mm) H-600-A SD		
16.	3308840	H-573	1" (25 mm) Control Stop Cap CP for use with 1" (25 mm) & 3/4" (19 mm) H-700-A and 1" (25 mm) H-600-A SD Stops		
	0308848PK	H-582	3/4" (19 mm) Control Stop Cap CP for use with 3/4" (19 mm) H-600-A SD Stops		
17.	3308866	H-574	1" (25 mm) Control Stop Cap with Bumper for use with 1" (25 mm) & 3/4" (19 mm) H-700-A and 1" (25 mm) H-600-A SD Stops		
18.	3308867	H-576	1" (25 mm) Control Stop Cap with Extended Bumper for use with 1" (25 mm) & 3/4" (19 mm) H-700-A and 1" (25 mm) H-600-A SD Stops		
19.	3308860	H-1006-A	Repair Kit for 1" (25 mm) Stops with Concealed WH for use with 1" (25 mm) H-700-A, H-600-A, and H-543-AWH WH Series Stops		
	3308859	H-1007-A	Repair Kit 3/4" (19 mm) Stops with Concealed Wh for use with 3/4" (19 mm) H-700-A WH Series Stops		
20.	0388010	H-730-A	1" (25 mm) Concealed WH Bak-Chek® Angle Stop RB		
	0388011	H-730-A	3/4" (19 mm) Concealed WH Bak-Chek® Angle Stop RB		
21.	3308872	H-1011-A	Repair Kit (for Concealed WH only; does not include bonnet)		
42.	0208083PK	H-623	Bonnet		
	0308705	H-561	Bonnet – <b>DISCONTINUED</b>		
43.	0301048	A-143-A	CP Valve Body includes (H-550) coupling, (H-551) tailpiece, (H552) Locking Ring & (H553) O-ring		
	0301050	A-143-A	RB Valve Body includes (H-550) coupling, (H-551) tailpiece, (H552) Locking Ring & (H553) O-ring		
	0301065PK	A3SPL-1	CP Valve Body ONLY		
	3388015	H-1015-A	Flow Control Kit (HEU Only) (not Shown)		

5323006


V-500-AA



## Optima® Regal® Flushometer

**OPTIMA® REGAL® FLUSHOMETER PARTS LIST** 

NOTE: Also for use with Regal® XL (Since mid-2010)

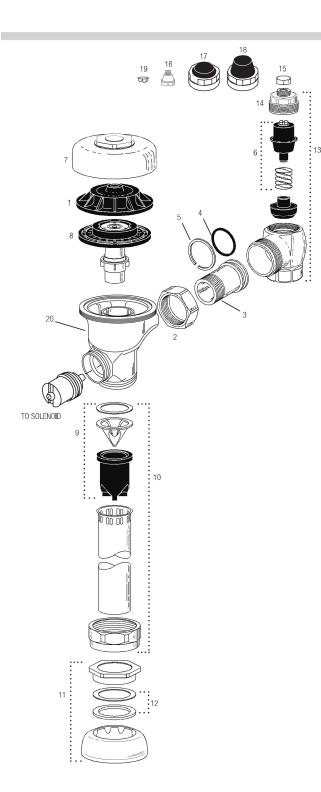

Item No.	Code No.	Part No.	Description		
1.	0301168	A-71	Inside Cover		
2.	0308676PI	<b>(</b> H-550	CP Stop Coupling		

3 0308801 H-551-A CP Adjustable Tail 2-1/16" (52 mm) long 4. 5308696 H-553 O-Ring - 24 per package 5. 5308381 H-552 Locking ring - 12 per package 6. 3308853 H-541-A-SD Control Stop Repair Kit for use with 1" (25 mm) H-700-A & 3/4" (19 mm) H-700-A, 1" (25 mm) H-600-A, 1" (25 mm) & 3/4" (19 mm) H-700-A and 1" (25 mm) H-540-A SD Stops

**3308856** H-543-A-SD Control Stop Repair Kit for use with 3/4" (19 mm) H-600-A

 7.
 0317004PK
 R-10
 CP Cover

 8.
 SEE INSIDE PARTS ASSEMBLY CHART PAGE 61

 9.
 3323192
 V-551-A
 Vacuum Breaker Repair Kit

 10.
 5323005
 V-500-AA
 3/4" (19 mm) x 9" (229 mm) CP Vacuum Breaker

Vacuum Breaker

1-1/4" (32 mm) x 9" (229 mm) CP

**5323007** V-500-AA 1-1/2" (38 mm) x 9" (229 mm) CP Vacuum Breaker

11. **0306102** F-54-A 3/4" (19 mm) CP Spud Coupling Assembly

 0306142
 F-55-A
 1-1/4" (32 mm) CP Spud Coupling Assembly

 0306145
 F-56-A
 1-1/2" (38 mm) CP Spud Coupling Assembly

 12.
 SEE SLIP JOINT GASKETS AND RINGS TABLE BELOW

13. 0388065 H-790-A 1" Screwdriver Stop Adjustable
0388064 H-790-A 3/4" Screwdriver Stop Adjustable
0388029 H-740-A 1" (25 mm) SD Bak-Chek® Stop CP – complete
DISCONTINUED

 0388031
 H-740-A
 3/4" (19 mm) SD Bak-Chek® Stop CP – complete DISCONTINUED

 14.
 0308612PK
 H-622
 CP Bonnet (Current Regal®)

| 14. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16. | 16.

Bumper Assembly – 6 per package **DISCONTINUED** 16. 5310034 17. 3308866 H-574 Stop Cap, chrome plated with Seat Bumper (-YO) 18. 3308867 H-576 Stop Cap, chrome plated with Extended Seat Bumper (-YG) 19. 5388002 H-528 Hole Plug 20. 0301048 A-143-A CP Valve Body

 0301050
 A-143-A
 RB Valve Body

 0301065PK
 A3SPL-1
 CP Valve Body ONLY

 3388015
 H-1015-A
 Flow Control Kit (HEU Only) (not Shown)

NOTE: Also refer to the Royal®, Regal®, control stop and flush connection sections.

#### ITEM 31A. SLIP JOINT GASKETS AND RINGS


Size	Code No.	Part No.	Description
1-1/2"	5306058	F-3	Red Friction Ring
	5322001	VBF-5	Black Slip Joint Gasket
	5319086	S-30	Flexible Seat
	0319079	S-21	Rigid Seat (rubber over brass)
1-1/2" x 1-1/4'	0396062	F-105	Slip Joint Gasket – Rigid
1-1/4"	5306057	F-3	Red Friction Ring
	5322176	VBF-5	Black Slip Joint Gasket
	0307052/5307052	G-21	Rigid Seat (rubber over brass)
1"	5306056	F-3	Red Friction Ring
	5306115	F-5	Black Slip Joint Gasket
3/4"	5306055	F-3	Red Friction Ring
	5306113	F-5	Black Slip Joint Gasket



#### **ROYAL® ESS (ITEM 24) REPAIR KIT**

Code No.	Part No.	Description	Relief Valve	Refill Head*	Flow Ring
3345014	EL-1102-A	Water Saver Water Closets-3.5 gpf (13.2 Lpf)	White	Gray	Smooth
3345015	EL-1103-A	9 Liter European Water Closets-2.4 gpf (9.0 Lpf)	Blue	Gray	Smooth
3345013	EL-1101-A	Low Consumption Water Closets-1.6 gpf (6.0 Lpf)	Green	Gray	Smooth
3345083	EL-1109-A	High Efficiency Urinals-1.28 gpf (4.8 Lpf)	Blue	Gray	Smooth
3345018	EL-1108-A	Water Saver Urinals-1.5 gpf (5.7 Lpf)	Black	Black	Smooth
3345017	EL-1107-A	Low Consumption Urinals-1.0 gpf (3.8 Lpf)	Green	Black	Slotted
3345016	EL-1106-A	Wash Down Urinals-0.5 gpf (1.9 Lpf)	Green	Black	Smooth
3345093	EL-1105-A	High Efficiency Urinals-0.125 gpf (0.5 Lpf)	Blue	HEU Black	Smooth

#### To identify the Flush Volume of a DUAL FILTERED DIAPHRAGM ASSEMBLY, look at the color of the relief valve, the refill head and the shape of flow ring.



\*NOTE: Water closet refill heads (gray) have larger slots than urinal refill heads (black).

#### **ROYAL® DIAPHRAGM ONLY KIT**


Code No.	Part No.	Description	Relief Valve	Refill Head*	Flow Ring
3301502	A-1041-A	Low Consumption Water Closets-1.6 gpf (6.0 Lpf)	Green	Gray	Smooth
3301501	A-1038-A	Water Saver Water Closets-3.5 gpf (13.2 Lpf)	White	Gray	Smooth
3301506	A-1045-A	High Efficiency Water Closets-1.28 gpf (4.8 Lpf)	Blue	Gray	Smooth
3301505	A-1044-A	9 Liter European Water Closets-2.4 gpf (9.0 Lpf)	Blue	Gray	Smooth
3301504	A-1043-A	Wash Down Urinals-0.5 gpf (1.9 Lpf)	Green	Black	Smooth
3321503	A-1042-A	Low Consumption Urinals-1.0 gpf (3.8 Lpf)	Green	Black	Slotted
3301500	A-1037-A	Water Saver Urinals-1.5 gpf (5.7 Lpf)	Black	Black	Smooth
3301142	A-1047-A	High Efficiency Urinals-0.25 gpf (1.0 Lpf) with White Inserts	White	HEU Black	Smooth
3301143	A-1050-A	High Efficiency Urinals-0.125 gpf (0.5 Lpf) with White Inserts	Blue	HEU Black	Smooth

<sup>\*</sup>NOTE: Water closet refill heads (gray) have larger slots than urinal refill heads (black).

# REGAL® ESS (ITEM 28) INSIDE PARTS KITS ASSEMBLY

NOTE: Also for use with Regal® XL (Since mid-2010)

THOTE. AND TO USE WITH THOUGHT ALL (CINES THIS 2010)				
Code No.	Part No.	Description		
3301036	A-36-A	4.5 gpf/17.0 Lpf-Closet		
3301037	A-37-A	1.5 gpf/5.7 Lpf-Urinal		
3301038	A-38-A	3.5 gpf/13.2 Lpf-Closet		
3301041	A-41-A	1.6 gpf/6.0 Lpf-Closet		
3301044	A-42-A	1.0 gpf/3.8 Lpf-Urinal		
3301081	A-43-A	0.5 gpf/1.9 Lpf-Urinal		
3301024	A-44-A	2.4 gpf/9.0 Lpf-Closet		
3301045	A-140-A	1.28 gpf/4.8 Lpf- Closet		

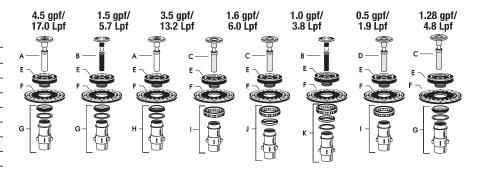

A-36-A	A-37-A	A-38-A	A-41-A	A-42-A	A-43-A	A-44-A	A-140-A
Closet	Urinal	Closet	Closet	Urinal	Urinal	Closet	Closet

#### REGAL® INSIDE PARTS LIST\*\* NOTE: Also for use with Regal® XL (Since mid-2010)

ltem			
No.	Code No.	Part No.	Description
Α.	5301058	A-19-AC	Relief Valve, White (Closet)
В.	5301059	A-19-AU	Relief Valve, Black (Urinal)
C.	5301211	A-19-ALC	Relief Valve, Green (Closet/Urinal-Low Consumption)
D.	0301143Pk	( A-19-AL	Relief Valve, Blue (9 Liter Closet)
E.	5301111	A-15-A	Disc
F.	5301188	A-156-A	Diaphragm
G.	5301236	A-163-A	Guide Assembly 4.5 gpf/17.0 Lpf Closet and 1.5 gpf/5.7 Lpf Urinal
Н.	5301032	A-152-A	Guide Assembly 3.5 gpf/13.2 Lpf Closet
I.	5301031	A-151-A	Guide Assembly 1.6 gpf/6.0 Lpf Closet
J.	5301155	A-155-A	Guide Assembly 1.0 gpf/3.8 Lpf Urinal
K.	5301157	A-157-A	Guide Assembly 0.5 gpf/1.9 Lpf Urinal

<sup>\*\*</sup>NOTE: All Regal\* inside part items are supplied in 12 per package.



SOLENOI	SOLENOID/SENSOR KITS LIST				
Code No.	Part No.	Description			
3305045	EL-124-2	CP 24 VAC Solenoid Assembly for exposed applications. Includes 24 VAC solenoid assembly and actuator cartridge assembly repair kit.			
3305154	EL-1001-A	Closet flushometer Electronic Accessories Kit with Override. Includes screws, hex wrench, plate for 2-gang electrical box mounting plate, override switch, yoke assembly, closet sensor replacement kit, an Optima® sticker and sensor Installation Instructions.			
3305170	EL-1005-A	Exposed Urinal flushometer Electronic Accessories Kit. Includes plate for 2-gang electrical box, four screws, yoke, hex wrench, washer, urinal sensor replacement kit, an Optima® sticker and sensor Installation Instructions.			
3305172	EL-1007-A	Concealed Urinal flushometer Accessories Kit. Includes screws, yoke, plate for 2-gang electrical box, hex wrench, washer, urinal sensor replacement kit, an Optima® sticker and sensor Installation Instructions.			

# EL-125 EL-126 EL-127 EL-126 EL-1500-L Closet EL-1500 Urinal EL-196 EL-198 EL-199 Panel shown with hole for override switch (closet eL-193 Urinal EL-193 Urinal EL-138 WB-37

#### **WALL BOX KITS CLOSET MODELS**

Code No.	Part No.	Description
3305180	EL-192-A	Closet Wall Box Kit – Stainless Steel. Includes four Mounting Screws, four Hex Nuts, four Lock Washers, Mounting Bracket, Electrical Box, Electrical Box Cover, Override Switch Subassembly, Wall Box 13" x 17" (330 mm x 432 mm) with 14.5" x 18.5" (368 mm x 470 mm) Stainless Steel Wall Box Cover with hole for override switch, Spanner Bit and Closet Sensor Replacement Kit.
3305160	EL-192-ALS	Same as EL-192-A. Sensor NOT included.

#### **WALL BOX KITS URINAL MODELS**

3305178	EL-191-A	Urinal Wall Box Kit - Stainless Steel. Includes Mounting
		Screws, Hex Nuts, Lock Washers, Wall Box 13" x 17"
		(330 mm x 432 mm) with 14.5" x 18.5" (368 mm x 470 mm)
		Stainless Steel Wall Box Cover, Mounting Bracket, Electrical
		Box, Electrical Box Cover, Spanner Bit, Urinal Sensor
		Replacement Kit.


**3305158** EL-191-ALS Same as EL-191-A. Sensor NOT included.

#### **WALL BOX PARTS**


0305845	EL-318	#8 Spanner Bit for WB-37 Spanner Screws
0334021	WB-37	Spanner Head Screws for ESS WB
5334000	WB-1000-A	6 Pack of WB-37 Screws
0305346	EL-216	Wall Box Frame and Stainless Steel Wall Box Cover for Water Closet, Mounting Hardware and Sensor NOT Included.
0305203	EL-193	Wall Box Frame and Stainless Steel Wall Box Cover for Urinal. Mounting Hardware and Sensor NOT Included.



#### TYPICAL WIRING DIAGRAM FOR ONE FLUSH VALVE

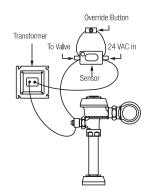

#### TYPICAL WIRING DIAGRAM FOR ONE OR MORE FLUSH VALVE(S)

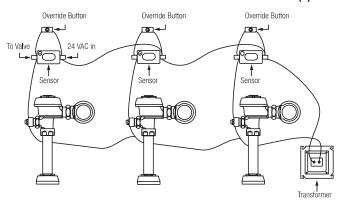




#### SENSOR REPLACEMENT

NOTE: The EL-1500 series Optima sensor (a two-wire unit) replaces the older EL-150 series sensors (either three-wire or four-wire units). Refer to the wiring history shown below.


#### **IMPORTANT**

- Be certain to disconnect the 24 VAC power supply either at the transformer or the fuse box. Failure to disable the power supply can result in damage to the EL-1500 series sensor.
- The solenoid activated must be removed from the valve on exposed urinal installations. Do not damage the O-ring seal on the operator assembly.
- 1. Remove the cover plate (for wall box installation, remove cover panel) and old sensor from the wall installation. Use a 5/64" hex wrench to remove the cover plate screws (or #8 drilled spanner head screwdriver EL-318 to remove the vandal-resistant screws from the wall box cover panel.)




- Connect one 24 VAC lead to the sensor terminal labeled "24 VAC IN" (see Figure 1B).
  - On an old three-wire series EL-150 sensor, this wire was connected to the BLACK sensor lead.
  - On an old four-wire series EL-150 sensor, this wire was connected to the BROWN sensor lead.
- Connect one solenoid lead to the sensor terminal labeled "TO VALVE" (see Figure 1B).
  - On an old three-wire or four-wire EL-150 series sensor, this wire was connected to the RED sensor lead.
- 4. Connect the remaining 24 VAC lead to the remaining solenoid lead.
  - On an old three-wire series EL-150 sensor, these wires were connected to the WHITE sensor leads,
  - On an old four-wire EL-150 series sensor, these wires were connected to the YELLOW and BLUE (or in very early models, the inner BROWN) sensor leads.
- On Water Closet installations only, connect the override button (shown as the override switch in wiring diagram) parallel to the EL-1500-L sensor.
- Reinstall the sensor with the orientation arrow on the lens side of the sensor pointing UP (see Figure 1A). Replace the cover plate (or wall box panel) and tighten the cover plate (or wall box panel) screws.
- 7. Reconnect the 24 VAC power supply at the transformer or the fuse box.

#### **WIRING DIAGRAM**

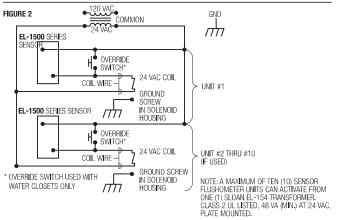

#### START-UP MODE

The self-adaptive sensor automatically adapts to the surrounding environment when 24 volt supply is activated. No manual adjustments are required. Start-up mode will take approximately one (1) minute to complete its cycle and is



important that no non-permanent target is present at this time. A continuous red light visible in sensor window indicates sensor is in the start-up mode. If the red light is flashing, this indicates that the sensor is picking up a target. Unless this target is a permanent fixture in the sensor's environment (i.e., wall or stall door), it must be removed from the view of the sensor. Then, either disconnect the 24 volt supply for twenty (20) seconds, or push the manual override button for twenty (20) seconds in closet set-up. Reconnect the 24 VAC power supply at the transformer or the fuse box. When the start-up cycle is complete, there will be no light visible in the sensor window.

NOTE: If the 24 volt power supply is ever interrupted for longer than twenty (20) seconds, the start-up mode automatically begins when power is restored.

Incorrect wiring or a short in the 24 volt power supply is indicated by a continuous warning signal seen in the senosr window. The visible red light flashes an "SOS" signal: three (3) slow, three (3) fast, three (3) slow flashes.

#### **SENSOR RANGE**

#### Water Closets - EL-1500-L

Nominal: 15"-50" (381-1270 mm); Self-Adaptive Window:  $\pm$  17" (432 mm)

#### Urinals - EL-1500

Nominal: 12"-32" (305-813 mm); Self-Adaptive Window:  $\pm$  10" (254 mm)


#### START-UP MODE (FOR PREVIOUS SENSOR)

NOTE: It is important that only permanent targets are present at this time.

The self-adaptive sensor automatically adjusts to the surrounding environment when the 24 volt supply is activated. No manual adjustment is required. The start-up cycle completes in approximately five (5) minutes. A continuous red light visible in the sensor window indicates the start-up mode. If the red light flashes, the sensor detects a target. Unless this target is a permanent fixture in the sensor's environment (i.e., a wall or stall door), it must be removed from the view of the sensor. If a target is permanent, the sensor will adapt itself around this target. In this case, the start-up mode may take up to ten (10) minutes. When the start-up cycle is complete, there will be no light visible in the sensor window.

NOTE: If the 24 volt power supply is ever interrupted for longer than fifteen (15) seconds, the start-up mode begins automatically when power is restored.

Incorrect wiring or a short in the 24 volt power supply will initiate a warning signal in the sensor window. The visible light flashes a continuous "S-0-S" signal: three (3) fast, three (3) slow, and three (3) fast flashes.

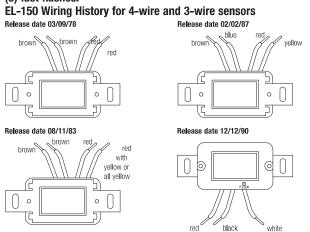



#### TROUBLESHOOTING GUIDE

**ATTENTION INSTALLERS:** With the exception of the control stop inlet, DO NOT USE pipe sealant or plumbing grease on any valve component or coupling! To protect the chrome or special finish of Sloan flushometers, DO NOT USE toothed tools to install or service these valves. Use our A-50 Super-Wrench™ or other smooth-jawed wrench to secure couplings. Regulations for low consumption fixtures (1.6 gpf/6.0 Lpf closets and 1.0 gpf/3.8 Lpf urinals) prohibit use of higher flush volumes.

#### **Urinals (EL-1500 Sensor)**

When the sensor detects a user, a slow flashing red light appears in the sensor window. After eight (8) to ten (10) seconds, the light flashes rapidly to indicate that the sensor is armed. When the sensor no longer detects a user, the sensor immediately activates the solenoid valve after a 0.5 second delay.

#### Water Closets (EL-1500-L Sensor)

When the sensor detects a user, a slow flashing red light appears in the sensor window. After approximately sixteen (16) seconds, the light will flash rapidly indicating sensor is armed. When the sensor no longer detects a user, the sensor immediately activates the solenoid after a 3 second delay.

#### Valve does not function (red light does not flash when user steps in front of sensor).

- A. No power is being supplied to sensor. Ensure that the main power is turned "ON". Check transformer, leads and connections. Repair or replace as necessary.
- B. EL-1500/EL-1500-L sensor is not operating. Replace sensor.

#### Valve does not function (red light flashes when user steps in front of sensor).

# INDICATOR: The red light stops flashing when user steps away and the valve makes a "clicking" sound but does not flush.

- A. No water is being supplied to the valve. Make certain that water supply is turned "ON" and the control stop is open.
- B. EL-128-A cartridge is fouled or jammed. Turn electronic power to valve "OFF" (failure to do so could result in damage to the solenoid coil). Remove the solenoid operator from the valve and remove the EL-128-A cartridge. Clean and/or repair as necessary.

# INDICATOR: The red light stops flashing when user steps away but the valve does NOT make a "clicking" sound and does NOT flush.

A. EL-163-A solenoid shaft assembly is fouled or jammed. Turn electronic power to valve "OFF" (failure to do so could result in damage to the solenoid coil). Remove EL-101 or EL-166 nut from the solenoid operator. Remove the coil from the solenoid operator. Use a spanner wrench or pliers to remove the EL-163-A solenoid shaft assembly from valve. Clean and/or replace as necessary. Be sure to replace plunger spring when reassembling solenoid shaft assembly.

# INDICATOR: The red light flashes three (3) fast flashes, three (3) slow flashes then three (3) fast flashes ("S-O-S") and continues to repeat this cycle even when user steps out of the sensor's detection range.

- A. EL-1500/EL-1500-L sensor wiring connections are incorrect. Rewire sensor to valve. One solenoid lead connects to the "TO VALVE" connection on sensor. One transformer lead connects to the "24 VAC IN" connection on sensor. Second solenoid lead and second transformer lead connect together.
- B. Wiring to sensor is ground shorted. Find short in wiring circuit and correct.
- C. EL-165-2 solenoid coil is burnt out or coil is not connected to solenoid plunger shaft. Reinstall or replace coil as necessary.

#### 3. Range too short.

- A. Power down unit for 30 seconds. Power up. Wait six (6) minutes for calibration.
- B. If reset does not work, replace.

#### 4. Volume of water is insufficient to adequately siphon fixture.

- A. Control stop is not open wide enough. Adjust control stop for desired water delivery.
- B. Low consumption unit is installed on water saver or conventional fixture. Replace diaphragm component parts of valve with kit that corresponds to appropriate flush volume of fixture.
- C. Inadequate water volume or pressure available from supply. Increase pressure or supply (flow rate) to the valve.

#### 5. Length of flush too long (long flushing) or valve fails to shut off.

- A. Water saver valve is installed on low consumption fixture. Replace diaphragm component parts of valve with kit that corresponds to appropriate flush volume of fixture.
- B. Relief valve in diaphragm is not seated properly or the by-pass hole in diaphragm is clogged. Disassemble inside diaphragm component parts and wash parts thoroughly. Replace worn parts if necessary.

#### 6. Water splashes from fixture.

- A. Supply flow rate is more than necessary. Adjust control stop to meet flow rate required for proper cleansing of the fixture.
- B. Closet valve is installed on urinal fixture. Replace closet diaphragm component parts with proper urinal kit (inside diaphragm assembly or inside parts kit).

#### **CARE AND CLEANING INSTRUCTIONS**

**DO NOT USE** abrasive or chemical cleaners to clean flushometers or sensor that may dull the luster and attack the chrome or special decorative finishes. Use **ONLY** mild soap and water, then wipe dry with a clean towel or cloth.

When cleaning the bathroom tile, protect the flushometer from any splattering of cleaner. Acids and cleaning fluids can discolor or remove chrome plating.

When assistance is required, please contact Sloan Technical Support at: 1-888-SLOAN-14 (1-888-756-2614).